



YAMAHA

OWNER'S MANUAL

YZF-R6

MOTORCYCLE

 Read this manual carefully before operating this vehicle.

LIT-11626-30-60

BN6-28199-10


EAU10043

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

YAMAHA

LIT-CALIF-65-01

 **Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.**

Congratulations on your purchase of the Yamaha YZFR6H / YZFR6HC. This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions concerning the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

The design and manufacture of this Yamaha motorcycle fully comply with the emissions standards for clean air applicable at the date of manufacture. Yamaha has met these standards without reducing the performance or economy of operation of the motorcycle. To maintain these high standards, it is important that you and your Yamaha dealer pay close attention to the recommended maintenance schedules and operating instructions contained within this manual.

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.

EWA10012





WARNING

Please read this manual and the "YOU AND YOUR MOTORCYCLE: RIDING TIPS" booklet carefully before operating this motorcycle. Do not attempt to operate this motorcycle until you have attained adequate knowledge of its controls and operating features. Regular inspections and careful maintenance, along with good operating techniques, will help ensure that you safely enjoy the capabilities and reliability of this motorcycle.

Important manual information

EAU63350

Particularly important information is distinguished in this manual by the following notations:

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

*Product and specifications are subject to change without notice.

EAU10194

YZFR6H / YZFR6HC OWNER'S MANUAL

©2016 by Yamaha Motor Corporation, U.S.A.

1st edition, December 2016

All rights reserved.

Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.

Printed in Japan.

P/N LIT-11626-30-60

Table of contents

Location of important labels	1-1	Shifting.....	7-3
Safety information	2-1	Engine break-in.....	7-4
Description	3-1	Parking.....	7-5
Left view	3-1	Periodic maintenance and adjustment	8-1
Right view.....	3-2	Owner's tool kit.....	8-2
Controls and instruments.....	3-3	Periodic maintenance chart for the emission control system.....	8-3
Special features	4-1	General maintenance and lubrication chart.....	8-4
D-mode (drive mode)	4-1	Removing and installing cowlings and panels.....	8-7
Traction control system.....	4-2	Checking the spark plugs.....	8-11
Quick shift system.....	4-4	Canister (for California)	8-12
Instrument and control functions	5-1	Engine oil and oil filter cartridge ...	8-13
Main switch/steering lock	5-1	Coolant	8-17
Handlebar switches.....	5-2	Air filter element.....	8-19
Indicator lights and warning lights	5-4	Checking the engine idling speed.....	8-20
Multi-function meter unit.....	5-6	Checking the throttle grip free play.....	8-20
Clutch lever	5-14	Valve clearance.....	8-21
Shift pedal	5-15	Tires	8-21
Brake lever	5-15	Cast wheels	8-24
Brake pedal.....	5-16	Adjusting the clutch lever free play.....	8-24
ABS	5-16	Checking the brake lever free play.....	8-25
Fuel tank cap.....	5-17	Brake light switches.....	8-26
Fuel.....	5-18	Checking the front and rear brake pads.....	8-26
Fuel tank breather hose and fuel tank overflow hose.....	5-19	Checking the brake fluid level.....	8-27
Catalytic converters	5-20	Changing the brake fluid.....	8-28
Seats	5-20	Drive chain slack.....	8-29
Rear view mirrors	5-22	Cleaning and lubricating the drive chain	8-30
Adjusting the front fork.....	5-22	Checking and lubricating the cables	8-31
Adjusting the shock absorber assembly.....	5-24	Checking and lubricating the throttle grip and cable	8-31
EXUP system	5-27	Checking and lubricating the brake and shift pedals.....	8-32
Auxiliary DC connector	5-27	Checking and lubricating the brake and clutch levers	8-32
Sidestand.....	5-28		
Ignition circuit cut-off system.....	5-28		
For your safety – pre-operation checks	6-1		
Operation and important riding points	7-1		
Starting the engine	7-2		


Table of contents

Checking and lubricating the sidestand.....	8-33
Lubricating the swingarm pivots	8-33
Checking the front fork.....	8-34
Checking the steering.....	8-34
Checking the wheel bearings	8-35
Battery	8-35
Replacing the fuses.....	8-37
Vehicle lights	8-38
Replacing the license plate light bulb	8-39
Supporting the motorcycle.....	8-39
Troubleshooting.....	8-40
Troubleshooting charts.....	8-41
Motorcycle care and storage.....	9-1
Matte color caution	9-1
Care	9-1
Storage	9-4
Specifications.....	10-1
Consumer information.....	11-1
Identification numbers.....	11-1
Diagnostic connector	11-3
Vehicle data recording.....	11-3
Reporting safety defects	11-4
Motorcycle noise regulation	11-5
Maintenance record	11-6
YAMAHA MOTOR CORPORATION, U.S.A. 2015 AND LATER MODEL STREET & DUAL-PURPOSE MOTORCYCLE LIMITED WARRANTY	11-7
YAMAHA EXTENDED SERVICE (Y.E.S.)	11-9
Index.....	12-1

Location of important labels

EAU63360

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle. If a label becomes difficult to read or comes off, a replacement label is available from your Yamaha dealer.

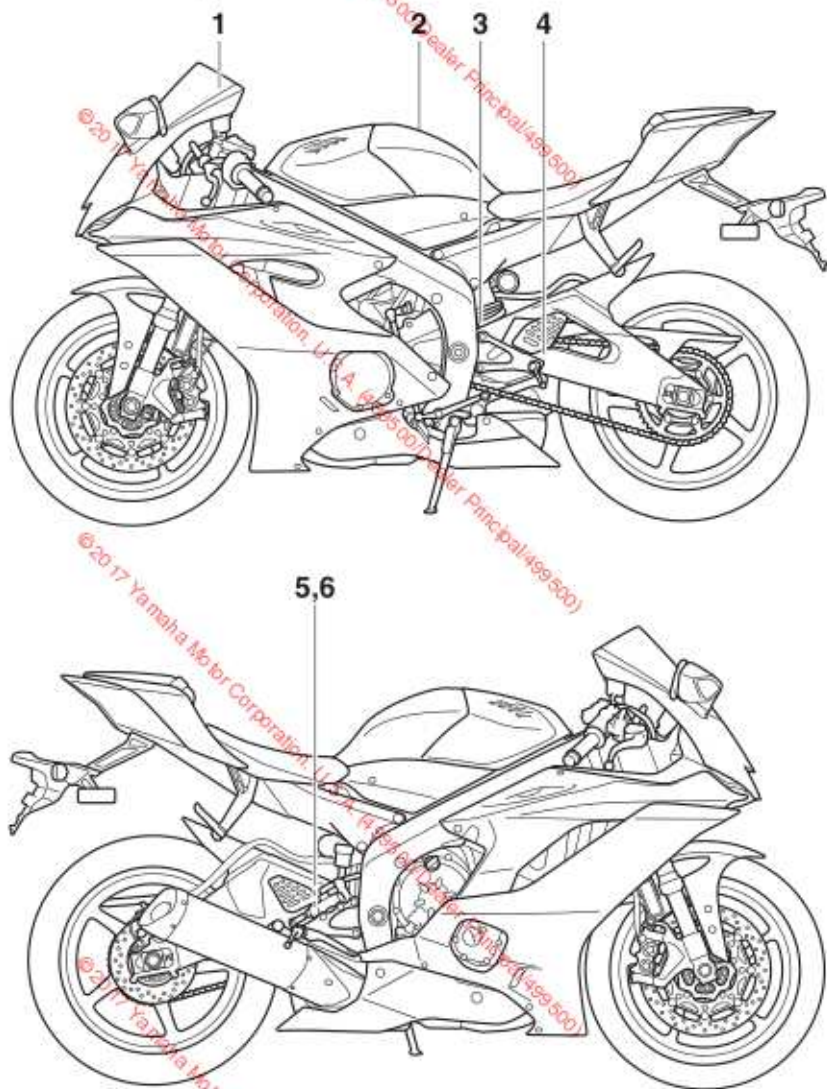

Location of important labels

1

NOTICE

- Cleaning with alkaline or acid cleaner, gasoline or solvent will damage windshield.
- Use neutral detergent.

4B9-2812K-00

2

⚠ WARNING

- BEFORE YOU OPERATE THIS VEHICLE, READ THE OWNER'S MANUAL AND ALL LABELS.
- ALWAYS WEAR AN APPROVED MOTORCYCLE HELMET, eye protection, and protective clothing.

PREMIUM UNLEADED GASOLINE ONLY
91 Min. Pump Octane (R+M)/2

29P-2816R-00

3

⚠ WARNING

This unit contains high pressure nitrogen gas. Mishandling can cause explosion.

- Read owner's manual for instructions.
- Do not incinerate, puncture or open.

4AA-22259-00

4

TIRE INFORMATION

Cold tire normal pressure should be set as follows.


FRONT : 250 kPa, {2.50 kgf/cm²}, 36 psi

REAR : 290 kPa, {2.90 kgf/cm²}, 42 psi

2CR-21668-00

5 California only


EMISSION HOSE ROUTING

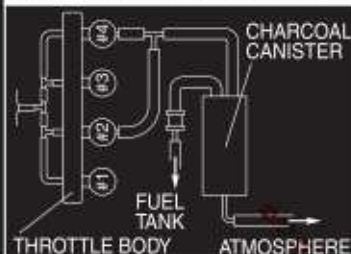

13S-21666-10

6 California only

VACUUM HOSE ROUTING

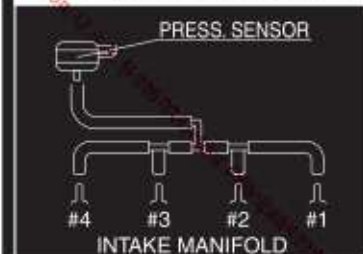

13S-21664-10

EAU1028C

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.
- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of

an accident or equipment damage. See page 6-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.

Safety information

2

- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
- Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
- Know your skills and limits. Staying within your limits may help you to avoid an accident.
- We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
- Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
- Always signal before turning or changing lanes. Make sure that other motorists can see you.
- The posture of the operator and passenger is important for proper control.
- The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
- The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
- Never ride under the influence of alcohol or other drugs.
- This motorcycle is designed for on-road use only. It is not suitable for off-road use.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
- The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
- A passenger should also observe the above precautions.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use

extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit.

Operation of an overloaded vehicle could cause an accident.

Maximum load:

185 kg (408 lb)

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
- Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
- Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
- Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such cargo as

Safety information

sleeping bags, duffel bags, or tents, can create unstable handling or a slow steering response.

- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others

at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
- Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the

operator and may limit control ability, therefore, such accessories are not recommended.

- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. See page 8-21 for tire specifications and for information on servicing and replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

- Remove all loose items from the motorcycle.
- Check that the fuel cock (if equipped) is in the off position and that there are no fuel leaks.
- Shift the transmission into gear (for models with a manual transmission).
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted


handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.

- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

Description


EAU63371

Left view

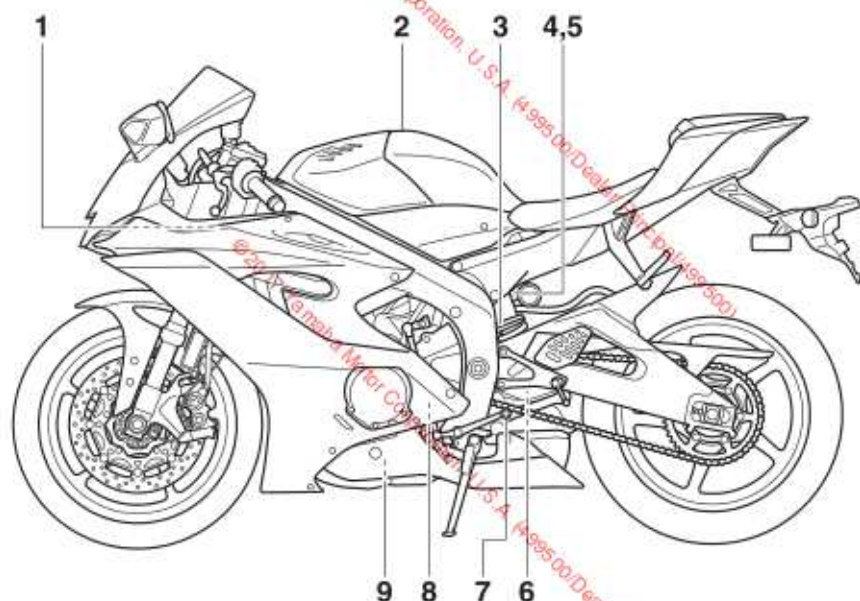

1. Fuse box 2 (page 8-37)
2. Fuel tank cap (page 5-17)
3. Spring preload adjuster (page 5-24)
4. Fast compression damping force adjuster (page 5-24)
5. Slow compression damping force adjuster (page 5-24)
6. Rebound damping force adjuster (page 5-24)
7. Shift pedal (page 5-15)
8. Engine oil filter cartridge (page 8-13)
9. Engine oil drain bolt (page 8-13)

Right view

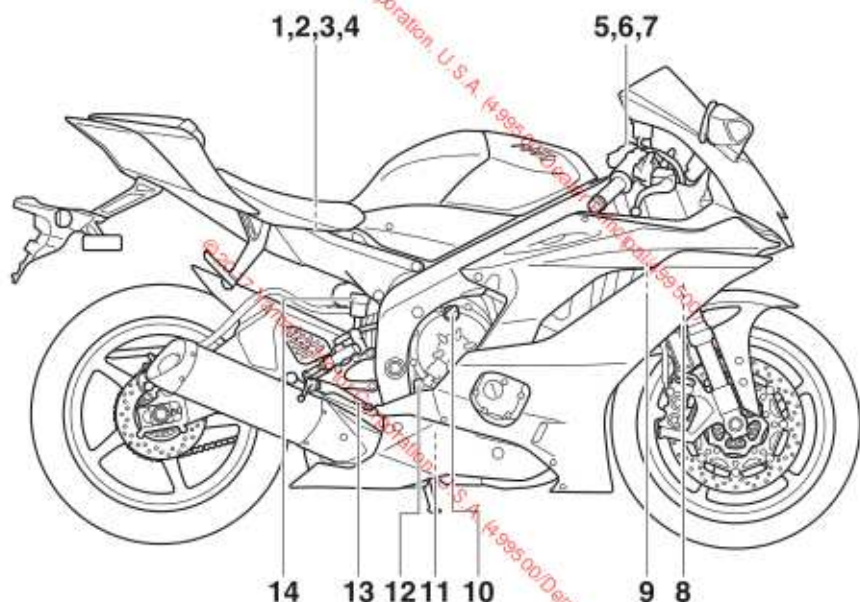


1. Fuse box 1 (page 8-37)
2. Main fuse (page 8-37)
3. ABS motor fuse (page 8-37)
4. Battery (page 8-35)
5. Spring preload adjuster (page 5-22)
6. Rebound damping force adjuster (page 5-22)
7. Compression damping force adjuster (page 5-22)
8. Coolant reservoir (page 8-17)
9. Radiator cap (page 8-17)
10. Engine oil filler cap (page 8-13)
11. Coolant drain bolt (page 8-18)
12. Engine oil dipstick (page 8-13)
13. Brake pedal (page 5-16)
14. Rear brake fluid reservoir (page 8-27)

Description

EAU63401

Controls and instruments

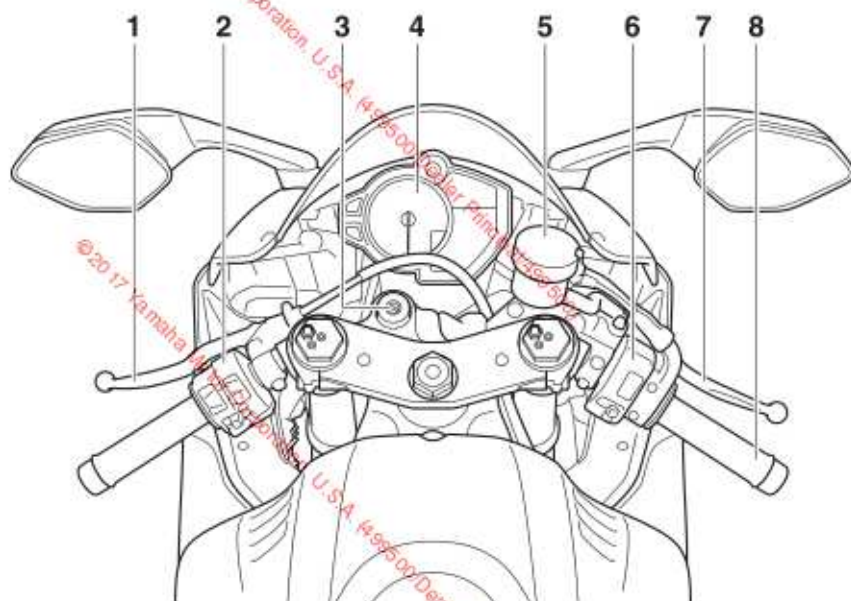


1. Clutch lever (page 5-14)
2. Left handlebar switches (page 5-2)
3. Main switch/steering lock (page 5-1)
4. Multi-function meter unit (page 5-6)
5. Front brake fluid reservoir (page 8-27)
6. Right handlebar switches (page 5-2)
7. Brake lever (page 5-15)
8. Throttle grip (page 8-20)

D-mode (drive mode)

D-mode is an electronically controlled engine performance system. This model has three mode selections: "STD", "A", and "B".

WARNING

Do not change the drive mode while the vehicle is moving.

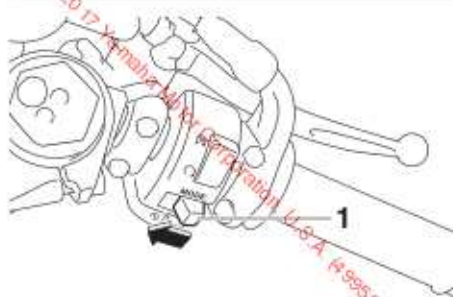

1. Drive mode switch "MODE"

With the throttle grip closed, push this switch to change the drive mode in the following order:

STD → A → B → STD

TIP

- Make sure you understand each drive mode before operating the drive mode switch.
- The current drive mode is shown in the drive mode display (page 5-10).
- The current drive mode is saved when the vehicle is turned off.

Mode "STD"

Mode "STD" is suitable for various riding conditions.

This mode allows the rider to enjoy smooth and sporty drivability from the low-speed range to the high-speed range.

Mode "A"

Mode "A" offers a sportier engine response in the low- to mid-speed range compared to mode "STD".

Mode "B"

Mode "B" offers response that is somewhat less sharp compared to mode "STD" for riding situations that require especially sensitive throttle operation.

Special features

Traction control system

The traction control system (TCS) helps maintain traction when accelerating on slippery surfaces, such as unpaved or wet roads. If sensors detect that the rear wheel is starting to slip (uncontrolled spinning), the traction control system assists by regulating engine power as needed until traction is restored.

ENJ79732

EWA10433

WARNING

The traction control system is not a substitute for riding appropriately for the conditions. Traction control cannot prevent loss of traction due to excessive speed when entering turns, when accelerating hard at a sharp lean angle, or while braking, and cannot prevent front wheel slipping. As with any vehicle, approach surfaces that may be slippery with caution and avoid especially slippery surfaces.



1. Engine trouble warning light "⚠"
2. Traction control system indicator light "TCS"
3. TCS display

The "tcs" indicator light flashes when traction control has engaged. You may notice slight changes in engine and exhaust sounds when the system has engaged.

When the traction control system is turned off, the "tcs" indicator light will come on.

TIP

- When the vehicle is turned on, the traction control system is turned on and set to the last used TCS setting.
- The current TCS setting is shown in the TCS display (page 5-10).

TCS settings

TCS "OFF"

TCS "OFF" turns the traction control system off.

TCS "1"

TCS "1" minimizes traction control system assist.

TCS "2, 3, 4, 5"

TCS levels "2" through "5" sequentially increase traction control system assist.

TCS "6"

TCS "6" maximizes traction control assist; wheel spin is most strongly controlled.

ECA16801

NOTICE

Use only the specified tires. (See page 8-21.) Using different sized tires will prevent the traction control system from controlling tire rotation accurately.

Setting the traction control system



1. Traction control system switch "TCS"

To turn TCS off

Stop the vehicle and:

- push up on the TCS switch for two seconds to turn the traction control system off.
- push down on the TCS switch to turn the traction control system back on.

TIP

Turn the traction control system off to help free the rear wheel if it is stuck in mud or sand, etc.

To change TCS settings

Stop the vehicle or close the throttle and:

- push up on the TCS switch to decrease traction control (6→5→4→3→2→1).
- push down on the TCS switch to increase traction control (1→2→3→4→5→6).

TIP

TCS settings can also be changed when moving in straight line if the throttle grip is held in a fixed position for two seconds while in 4th, 5th, or 6th gear.

WARNING

Take extra precaution when changing modes while riding.

Resetting the traction control system

The traction control system will automatically disable when:

- the front wheel or rear wheel comes off the ground while riding.
- excessive rear wheel spin is detected while riding.
- either wheel is rotated with the key turned to "ON" (such as when performing maintenance).

If the traction control system is disabled, both the "tcs" indicator light and the "⚠" warning light will come on.

Should this occur, try resetting the system as follows.

1. Stop the vehicle and turn the key to "OFF".
2. Wait a few seconds and then turn the key back to "ON".
3. The "tcs" indicator light should turn off and the system be enabled.

TIP

If the "tcs" indicator light remains on after resetting, the vehicle may still be ridden; however, have a Yamaha dealer check the vehicle as soon as possible.

4. Have a Yamaha dealer check the vehicle and turn off the "⚠" warning light.

Special features

EAL80010

Quick shift system

The quick shift system (QS) allows for full-throttle, clutch lever-less, electronically-assisted upshifts. When the shift switch detects motion in the shift pedal (page 5-15), engine power and drive torque are momentarily adjusted to allow the upshift to occur.

TIP

- This system requires an accessory part to be activated. Contact your Yamaha dealer for details.
- The quick shift system operates when traveling at least 20 km/h (12 mi/h) with an engine speed of 2000 r/min or higher, and only when accelerating.
- It does not operate when the clutch lever is pulled.

EAU10462

EAU73800

Main switch/steering lock



The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

ON

All electrical circuits are supplied with power, and the engine can be started. The key cannot be removed.

TIP

The headlight comes on automatically when the engine is started. The headlight will stay on until the key is turned to "OFF", even if the engine stalls.

OFF

All electrical systems are off. The key can be removed.




WARNING

Never turn the key to "OFF" or "LOCK" while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

LOCK

The steering is locked and all electrical systems are off. The key can be removed.

To lock the steering

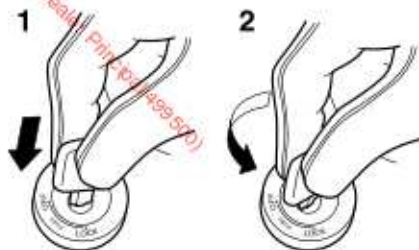


1. Push.
2. Turn.

1. Turn the handlebars all the way to the left.
2. With the key in the "OFF" position, push the key in and turn it to "LOCK".
3. Remove the key.

TIP

If the steering will not lock, try turning the handlebars back to the right slightly.

To unlock the steering

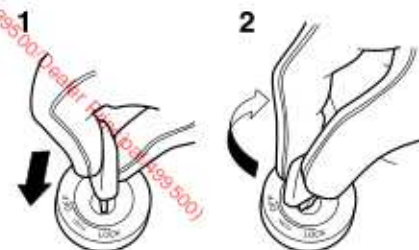

1. Push.
2. Turn.


Instrument and control functions

Push the key in and turn it to "OFF".

EAU66054


Handlebar switches

Left

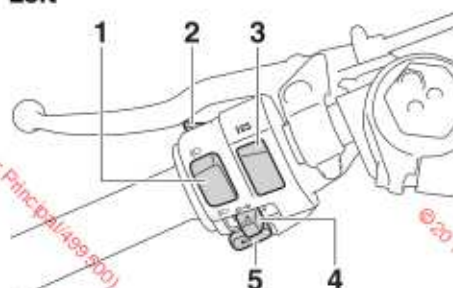

1. Dimmer switch "III/O/III"
2. Pass switch "III/O"
3. Traction control system switch "TCS"
4. Turn signal switch "↔/↔"
5. Horn switch "🔊"

Right

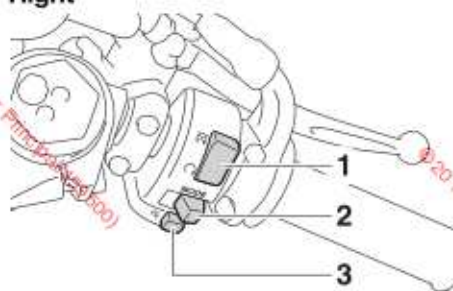

1. Engine stop switch "🛑/🛑"
2. Drive mode switch "MODE"
3. Start switch "🔑"

EAU79740

Pass switch "III/O"



Press this switch to flash the headlight and to mark the start of each lap when using the lap timer.

TIP

When the dimmer switch is set to "III/O", the passing switch has no effect.

Dimmer switch “/”

EAU73871

Set this switch to “” for the high beam and to “” for the low beam.

TIP

When the switch is set to low beam, only the left headlight comes on.



Drive mode switch “MODE”

EAU73931

See page 4-1 for an explanation of the drive mode.

Turn signal switch “/”

EAU68040

To signal a right-hand turn, push this switch to “”. To signal a left-hand turn, push this switch to “”. When released, the switch returns to the center position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

Horn switch “”

EAU68030

Press this switch to sound the horn.



Traction control system switch “TCS”

EAU73951

See page 4-2 for an explanation of the traction control system.

Engine stop switch “/”

EAU71450

Set this switch to “” before starting the engine. Set this switch to “” to stop the engine in case of an emergency, such as when the vehicle overturns or when the throttle cable is stuck.

Start switch “”

EAU79880

Push this switch to crank the engine with the starter.

See page 7-2 for starting instructions prior to starting the engine.

Instrument and control functions

Indicator lights and warning lights



1. Shift light
2. Engine trouble warning light "E" (engine icon)
3. Oil level warning light "O" (oil can icon)
4. Coolant temperature warning light "T" (thermometer icon)
5. Traction control system indicator light "TCS"
6. Turn signal indicator light "L" (left arrow icon)
7. High beam indicator light "H" (right arrow icon)
8. Neutral indicator light "N" (N in circle icon)
9. Fuel level warning light "F" (fuel tank icon)
10. ABS warning light "ABS" (ABS icon)

Turn signal indicator light "L" (left arrow icon)

This indicator light flashes when a turn signal light is flashing.

Neutral indicator light "N" (N in circle icon)

This indicator light comes on when the transmission is in the neutral position.

High beam indicator light "H" (right arrow icon)

This indicator light comes on when the high beam of the headlight is switched on.

Oil level warning light "O" (oil can icon)

This warning light comes on if the engine oil level is low.

When the vehicle is turned on, the light will perform a circuit check (come on for a few seconds and then go off). If the warning light remains on after confirming that the oil level is correct (page 8-13), have a Yamaha dealer check the vehicle.

TIP

- Even if the oil level is sufficient, the warning light may flicker when riding up or downhill, or during sudden acceleration or deceleration, but this is not a malfunction.
- If a malfunction is detected, the oil level warning light will flash repeatedly. Have a Yamaha dealer check the vehicle.

Fuel level warning light "F" (fuel tank icon)

This warning light comes on when you are low on fuel. When the fuel level drops below approximately 3.4 L (0.90 US gal, 0.75 Imp.gal), the light will come on to remind you to refuel as soon as possible.

When the vehicle is turned on, the light will perform a circuit check (come on for a few seconds and then go off). If the warning light does not come on during the circuit check, or if the warning light remains on after refueling, have a Yamaha dealer check the vehicle.

TIP

If a malfunction is detected, the fuel level warning light will flash repeatedly. Have a Yamaha dealer check the vehicle.

Coolant temperature warning light “ ”

EAU72930

This warning light comes on if the engine overheats. If this occurs, reduce the load on the engine immediately. If message “HI” flashes in the coolant temperature display, stop the vehicle, then stop the engine and let the engine cool.

The electrical circuit of the warning light can be checked by turning the key to “ON”. The warning light should come on for a few seconds, and then go off.

If the warning light does not come on initially when the key is turned to “ON”, or if the warning light remains on, have a Yamaha dealer check the electrical circuit.

ECA10022

NOTICE

Do not continue to operate the engine if it is overheating.

TIP

- For radiator-fan-equipped vehicles, the radiator fan(s) automatically switch on or off according to the coolant temperature in the radiator.
- If the engine overheats, see page 8-42 for further instructions.

EAU73171

Engine trouble warning light “ ”

This warning light comes on if a problem is detected in the engine or other vehicle control system. If this occurs, have a Yamaha dealer check the on-board diagnostic system.

The electrical circuit of the warning light can be checked by turning the key to “ON”. The warning light should come on for a few seconds, and then go off.

If the warning light does not come on initially when the key is turned to “ON”, or if the warning light remains on, have a Yamaha dealer check the vehicle.

EAU69891

ABS warning light “ ”

In normal operation, this warning light comes on when the key is turned to “ON”, and goes off after traveling at a speed of 10 km/h (6 mi/h) or higher.

If the ABS warning light:

- does not come on when the key is turned to “ON”
- comes on or flashes while riding
- does not go off after traveling at a speed of 10 km/h (6 mi/h) or higher

The ABS may not work correctly. If any of the above occurs, have a Yamaha dealer check the system as soon as possible. (See page 5-16 for an explanation of the ABS.)

EWA16041

WARNING

If the ABS warning light does not go off after traveling at a speed of 10 km/h (6 mi/h) or higher, or if the warning light comes on or flashes while riding, the brake system reverts to conventional braking. If either of the above occurs, or if the warning light does not come on at all, use extra caution to avoid possible wheel lock during emergency

Instrument and control functions

braking. Have a Yamaha dealer check the brake system and electrical circuits as soon as possible.

Traction control system indicator light "TCS"

This indicator light flashes when traction control has engaged. If the traction control system is turned off, the indicator light will come on.

When the vehicle is turned on, the light will perform a circuit check (come on for a few seconds and then go off). If the light does not come on during the circuit check, or if the light remains on, Yamaha dealer check the vehicle.

Shift light

This light can be set to come on and go off at select engine speeds. (See page 5-13.)

When the vehicle is turned on, the light will perform a circuit check (come on for a few seconds and then go off).

If the light does not come on during the circuit check, have a Yamaha dealer check the vehicle.

Multi-function meter unit



1. Tachometer
2. Shift light
3. TCS display
4. Coolant/air intake temperature display
5. Drive mode display
6. Speedometer
7. Multi-function display
8. Clock/lap timer
9. Transmission gear display
10. "RESET" button
11. "SELECT" button

WARNING

Be sure to stop the vehicle before making any setting changes to the multi-function meter unit. Changing settings while riding can distract the operator and increase the risk of an accident.

The multi-function meter unit is equipped with the following:

- speedometer
- tachometer
- clock
- lap timer
- coolant temperature display
- air intake temperature display
- transmission gear display
- drive mode display
- TCS display
- multi-function display

Instrument and control functions

- display brightness and shift light control mode

TIP

- To switch the multi-function meter unit between miles and kilometers, push the "SELECT" button for one second.
- The "F", "GPS", and "QS" icons require accessory parts to function.

Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer



1. Tachometer
2. Tachometer red zone

The electric tachometer shows the engine speed, as measured by the rotational velocity of the crankshaft, in revolutions per minute (r/min). When the vehicle is first powered on, the tachometer needle will sweep once across the r/min range and then return to zero.

NOTICE

Do not operate the engine in the tachometer red zone.
Red zone: 16500 r/min and above

Clock and lap timer



1. Clock

The clock uses a 12-hour time system.

To set the clock

1. Turn the key to "ON".
2. Push the "SELECT" button and the "RESET" button for two seconds. The hour digits will start flashing.
3. Push the "RESET" button to set the hours.
4. Push the "SELECT" button, and the minute digits will start flashing.
5. Push the "RESET" button to set the minutes.
6. Push the "SELECT" button to confirm the settings and start the clock.

To switch between the clock and lap timer

Push and release the "SELECT" button and the "RESET" button at the same time.

Instrument and control functions




The lap timer records and stores up to 20 lap times. The lap time history records are divided into two groups, "L" for lap order and "F" for fastest order. For lap order, the most recent lap is designated L1 (and L19 will become L20). In the case of fast lap history, any new fast lap within the top 20 will be inserted and the previous F20 will be pushed out of the history.

To use the lap timer

1. Push the "RESET" button for one second to set the lap timer to the counting-ready state (the colon ":" and period "." will flash).
2. Push the pass switch "III" to start the lap timer.
3. Push the pass switch "III" to mark the start of each new lap.
4. Push the "SELECT" button to stop the lap timer.
5. Push the "SELECT" button again to reset the lap timer (or push the "RESET" button for one second to reset the lap timer and set it to the counting-ready state).

To view the lap time history

1. Push the "SELECT" button for one second. Lap order history is selected (indicated by "L-20" in the lower part of the display), or push the "SELECT" button again to select the fastest lap history (indicated by "F-20").
 - "L-20" = lap order (most recent is L1)
 - "F-20" = fastest order (fastest lap time is F1)

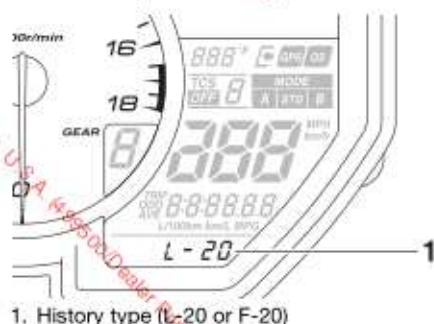

2. Push the "RESET" button and the 1st lap time of that history group (indicated by "L1" or "F1") is shown.



3. Use the "SELECT" button to scroll the history in ascending order, or use the "RESET" button to scroll the history in descending order.

Instrument and control functions

- When you have finished viewing the lap records you can:
 - push the "RESET" button for one second to delete that group of lap records.
 - push the "SELECT" button for one second to exit and return to the lap timer.

Coolant temperature display



1. Coolant temperature display

This display indicates the temperature of the coolant from 105 °F to 255 °F in 1 °F increments.

If the coolant temperature is between 242 and 255 °F, the coolant temperature display flashes and the coolant temperature warning light comes on. If this occurs, reduce the load on the engine by riding at a moderate pace, at low rpm, until the coolant temperature goes down. If the temperature does not go down, or if the message "HI" flashes, stop the engine and let it cool. (See page 8-42.)

TIP

- When the vehicle is turned on, the coolant temperature display is automatically selected.

- When the coolant temperature is below 105 °F, "Lo" will be displayed.

Air intake temperature display



1. Air intake temperature display

This display indicates the temperature of the air drawn into the air intake duct. Push the "RESET" button to switch the display between the coolant temperature and the air intake temperature.

TIP

- When the coolant temperature display is selected, "C" is displayed for one second, and then the coolant temperature is displayed.
- When the air intake temperature display is selected, "A" is displayed for one second, and then the air intake temperature is displayed.
- When the air temperature is below 16 °F, "16 °F" will be displayed.

Instrument and control functions

Transmission gear display



1. Neutral indicator light "N"
2. Transmission gear display

This display shows the selected gear. The neutral position is indicated by "N" and by the neutral indicator light.

TCS display



1. TCS display

This display indicates which traction control system setting has been selected: "1" through "6" or "OFF". For more details on the TCS settings and on how to select them, see page 4-2.

Drive mode display



1. Drive mode display

This display indicates which drive mode has been selected: "STD", "A" or "B". For more details on the modes and on how to select them, see page 4-1.

Multi-function display



1. Multi-function display

The multi-function display is equipped with the following:

- odometer
- two tripmeters
- fuel reserve tripmeter
- instantaneous fuel consumption
- average fuel consumption
- total fuel used

Instrument and control functions

Navigating the multi-function display

Push the "SELECT" button to change between the odometer "ODO", tripmeters "TRIP 1" and "TRIP 2", instantaneous fuel consumption "km/L", "L/100 km" or "MPG", average fuel consumption "AVE ____ km/L", "AVE ____ L/100 km" or "AVE ____ MPG", and total fuel used "____" in the following order:

ODO → TRIP 1 → TRIP 2 → km/L, L/100 km or MPG → AVE ____ km/L, AVE ____ L/100 km or AVE ____ MPG → ____ → ODO

Odometer and tripmeters

The odometer shows the total distance traveled by the vehicle.

The tripmeters show the distance traveled since they were last reset. To reset a tripmeter, push the "RESET" button for one second.

TIP

- The odometer will lock at 999999.
- The tripmeters will reset and continue counting after 9999.9 is reached.

Fuel reserve tripmeter

If the fuel level warning light comes on, the display will automatically change to the fuel reserve tripmeter "TRIP F" and start counting the distance traveled from that point. In this case, push the "SELECT" button to switch the display in the following order:

TRIP F → km/L, L/100 km or MPG → AVE ____ km/L, AVE ____ L/100 km or AVE ____ MPG → ____ → ODO → TRIP 1 → TRIP 2 → TRIP F

TIP

If you do not reset the fuel reserve tripmeter manually, after refueling and traveling 5 km (3 mi), it will reset automatically and disappear from the display.

Instantaneous fuel consumption



1. Instantaneous fuel consumption display

This function calculates the fuel consumption under current riding conditions.

The instantaneous fuel consumption display is set to "MPG", or when using kilometers to "km/L" or "L/100 km". To switch between "km/L" and "L/100 km", push the "SELECT" button for one second.

- "km/L": The distance that can be traveled on 1.0 L of fuel under the current riding conditions is shown.
- "L/100 km": The amount of fuel necessary to travel 100 km under the current riding conditions is shown.

Instrument and control functions

- “MPG”: The distance that can be traveled on 1.0 US gal of fuel under the current riding conditions is shown.

TIP

If traveling at speeds under 20 km/h (12 mi/h), “— — —” is displayed.

Average fuel consumption



1. Average fuel consumption display

This function calculates the average fuel consumption since it was last reset.

The average fuel consumption display is set to “AVE — — — MPG”, or when using kilometers to “AVE — — — km/L” or “AVE — — — L/100 km”. When using kilometers, push the “SELECT” button for one second to switch between “AVE — — — km/L” and “AVE — — — L/100 km”.

- “AVE — — — km/L”: The average distance that can be traveled on 1.0 L of fuel is shown.
- “AVE — — — L/100 km”: The average amount of fuel necessary to travel 100 km is shown.
- “AVE — — — MPG”: The average distance that can be traveled on 1.0 US gal of fuel is shown.

TIP

- To reset the average fuel consumption display, push the “RESET” button for one second.
- After resetting the average fuel consumption display, “— — —” will be shown until the vehicle has traveled 1 km (0.6 mi).

Total fuel used



1. Total fuel used display

This display shows the total amount of fuel that has been used since it was last reset.

When using miles, this figure is shown in gallons. When using kilometers, this figure is shown in liters.


To reset the total fuel used display, push the “RESET” button for one second.

TIP

After the total fuel used display is reset, “— — —” will be shown until the vehicle has traveled a sufficient distance.

Instrument and control functions

Display brightness and shift light control mode

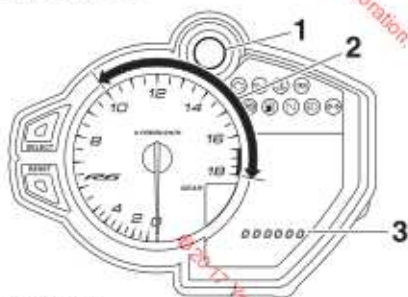

1. Shift light
2. Shift light activation range
3. Brightness level display

This mode cycles through five control functions, allowing you to make the following settings in the order listed below.

- Display brightness - adjust the brightness of the displays and tachometer.
- Shift light activity function - set the shift light to on, flash, or off.
- Shift light activation - set the engine speed at which the shift light will be come on.
- Shift light deactivation - set the engine speed at which the shift light will be go off.
- Shift light brightness - adjust the brightness of the shift light.

TIP

Refer to the brightness level display when adjusting brightness levels.

To adjust the display and tachometer brightness

1. Turn the key to "OFF".
2. Push and hold the "SELECT" button.

3. Turn the key to "ON", and then release the "SELECT" button after five seconds.
4. Push the "RESET" button to set the brightness level.
5. Push the "SELECT" button to confirm the setting. The control mode changes to the shift light activity function.

To set the shift light activity function

1. Push the "RESET" button to select one of the following shift light activity settings:
 - On - the shift light will come on when activated. (This setting is selected when the shift light stays on.)
 - Flash - the shift light will flash when activated. (This setting is selected when the shift light flashes four times per second.)
 - Off - the shift light is deactivated; in other words, it will not come on or flash. (This setting is selected when the shift light flashes once every two seconds.)
2. Push the "SELECT" button to confirm the selected shift light activity. The control mode changes to the shift light activation point setting function.

To set the shift light activation point

TIP

The shift light activation point can be set between 10000 r/min and 18000 r/min. From 10000 r/min to 13000 r/min, the shift light can be set in incre-

Instrument and control functions

EAU12822

ments of 500 r/min. From 13000 r/min to 18000 r/min, the shift light can be set in increments of 200 r/min.

1. Push the "RESET" button to set the activation point engine speed.
2. Push the "SELECT" button to confirm the setting. The control mode changes to the shift light deactivation point setting function.

To set the shift light deactivation point

TIP


The deactivation range is the same as the activation range. However, be sure to set the deactivation point to a higher engine speed than the activation point, otherwise the shift light will not come on.

1. Push the "RESET" button to set the deactivation point engine speed.
2. Push the "SELECT" button to confirm the setting. The control mode changes to the shift light brightness function.

To adjust the shift light brightness

1. Push the "RESET" button to set the shift light brightness level.
2. Push the "SELECT" button to confirm the setting and exit the display brightness and shift light control mode.

Clutch lever

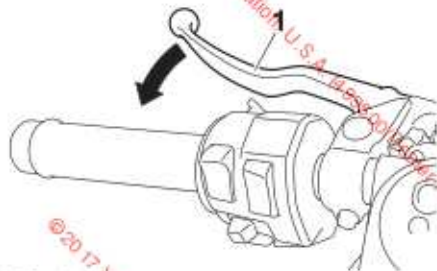


1. Clutch lever

The clutch lever is located on the left side of the handlebar. To disengage the clutch, pull the lever toward the handlebar grip. To engage the clutch, release the lever. The lever should be pulled rapidly and released slowly for smooth clutch operation.

The clutch lever is equipped with a clutch switch, which is part of the ignition circuit cut-off system. (See page 5-28.)

Shift pedal

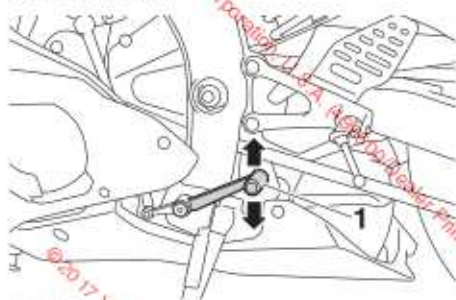

1. Shift pedal


The shift pedal is located on the left side of the motorcycle. While using the clutch lever, press down on the shift pedal to change to a lower gear, or pull up with your toes to shift to a higher gear. (See page 7-3.)

TIP

For equipped vehicles, when the quick shift system is turned on, the shift switch senses shift pedal movement and allows for upshifting without operating the clutch lever. (See page 4-4.)

Brake lever


The brake lever is located on the right side of the handlebar. To apply the front brake, pull the lever toward the throttle grip.

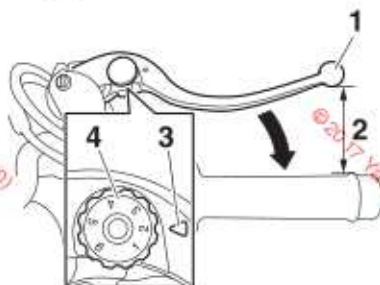

1. Brake lever
2. Distance between brake lever and throttle grip
3. "△" mark
4. Brake lever position adjusting dial

The brake lever is equipped with a brake lever position adjusting dial. To adjust the distance between the brake lever and the throttle grip, turn the adjusting dial while holding the lever pushed away from the throttle grip. Make sure that the appropriate setting on the adjusting dial is aligned with the "△" mark on the brake lever.

Brake pedal

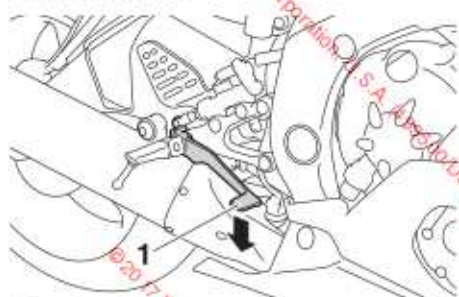

1. Brake pedal

The brake pedal is located on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

ABS

The Yamaha ABS (Anti-lock Brake System) features a dual electronic control system, which acts on the front and rear brakes independently.

Operate the brakes with ABS as you would conventional brakes. If the ABS is activated, a pulsating sensation may be felt at the brake lever or brake pedal. In this situation, continue to apply the brakes and let the ABS work; do not "pump" the brakes as this will reduce braking effectiveness.

EWA16061

WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- The ABS performs best with long braking distances.
- On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.

The ABS is monitored by an ECU, which will revert the system to conventional braking if a malfunction occurs.

TIP


- The ABS performs a self-diagnosis test each time the vehicle first starts off after the key is turned to "ON" and the vehicle has traveled at a speed of 10 km/h (6 mi/h) or higher. During this test, a "clicking" noise can be heard from the hydraulic control unit, and if the brake lever or brake pedal is even slightly applied, a vibration can be felt at the lever and pedal, but these do not indicate a malfunction.

- This ABS has a test mode which allows the owner to experience the pulsation at the brake lever or brake pedal when the ABS is operating. However, special tools are required, so please consult your Yamaha dealer.


ECA20100

NOTICE

Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.

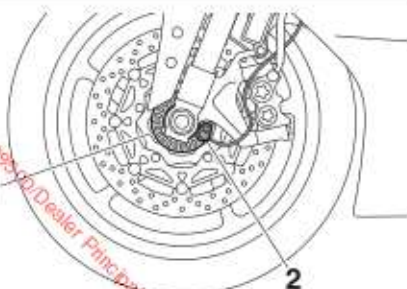


1. Front wheel sensor rotor
2. Front wheel sensor

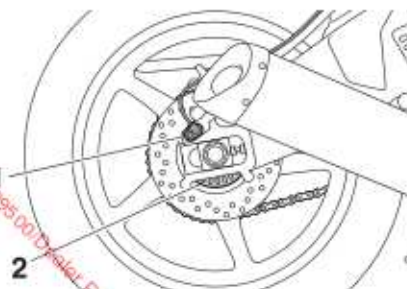

1. Rear wheel sensor
2. Rear wheel sensor rotor

Fuel tank cap

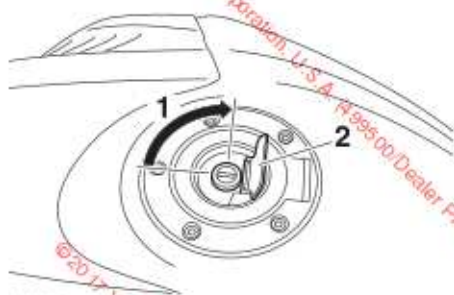

1. Unlock.
2. Fuel tank cap lock cover

To open the fuel tank cap

Open the fuel tank cap lock cover, insert the key into the lock, and then turn it 1/4 turn clockwise. The lock will be released and the fuel tank cap can be opened.

To close the fuel tank cap

1. Push the fuel tank cap into position with the key inserted in the lock.
2. Turn the key counterclockwise to the original position, remove it, and then close the lock cover.

TIP

The fuel tank cap cannot be closed unless the key is in the lock. In addition, the key cannot be removed if the cap is not properly closed and locked.

EW413082

WARNING

Make sure that the fuel tank cap is properly closed after filling fuel. Leaking fuel is a fire hazard.

Instrument and control functions

Fuel

Make sure there is sufficient gasoline in the tank.


EAU13222

EWA10852

WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. When refueling, be sure to insert the pump nozzle into the fuel tank filler hole. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.

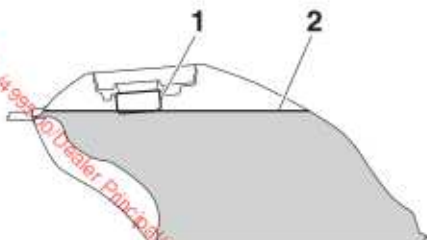

1. Fuel tank filler tube
2. Maximum fuel level

3. Wipe up any spilled fuel immediately. **NOTICE:** Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts. (ECA10072)
4. Be sure to securely close the fuel tank cap.

EWA15052

WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAU13384

Recommended fuel:

Premium unleaded gasoline (Gasohol [E10] acceptable)

Fuel tank capacity:

17 L (4.5 US gal, 3.7 Imp.gal)

Fuel reserve amount (when the fuel level warning light comes on):

3.4 L (0.90 US gal, 0.75 Imp.gal)

ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

Your Yamaha engine has been designed to use premium unleaded gasoline with a pump octane number


$[(R+M)/2]$ of 91 or higher, or a research octane number of 95 or higher. If knocking (or pinging) occurs, use a gasoline of a different brand. Use of unleaded fuel will extend spark plug life and reduce maintenance costs.

Gasohol

There are two types of gasohol: gasohol containing ethanol and that containing methanol. Gasohol containing ethanol can be used if the ethanol content does not exceed 10% (E10). Gasohol containing methanol is not recommended by Yamaha because it can cause damage to the fuel system or vehicle performance problems.

Fuel tank breather hose and fuel tank overflow hose

EAU55152

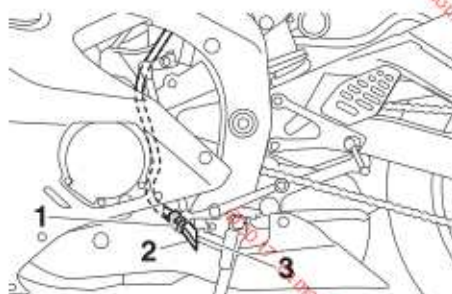

1. Guide
2. Fuel tank overflow hose
3. Fuel tank breather hose (U49 models)

Before operating the vehicle:

- Check each hose connection.
- Check each hose for cracks or damage, and replace if necessary.
- Make sure that the end of each hose is not blocked, and clean if necessary.
- Make sure that the end of each hose is positioned as shown.

TIP

For CA models: See page 8-12 for canister information.

Instrument and control functions

Catalytic converters

This vehicle is equipped with catalytic converters in the exhaust system.

EAU13417

EAU79900

⚠ WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:

- Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.
- Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.
- Make sure that the exhaust system has cooled down before doing any maintenance work.
- Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.

EWA10863

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause unreparable damage to the catalytic converter.


ECA10702

Seats

Passenger seat

To remove the passenger seat

1. Insert the key into the seat lock, and then turn it clockwise.

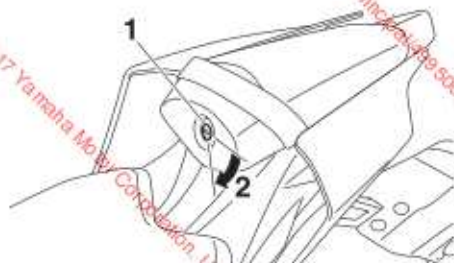


1. Seat lock
2. Unlock.

2. Lift the front of the passenger seat and pull it forward.

To install the passenger seat

1. Insert the projection on the rear of the passenger seat into the seat holder as shown, and then push the front of the seat down to lock it in place.

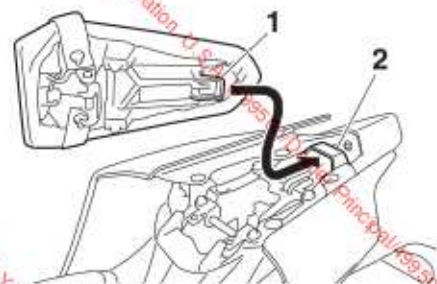

1. Projection
2. Seat holder

2. Remove the key.

Instrument and control functions

Rider seat

To remove the rider seat

1. Remove the passenger seat.
2. Pull up the corners on the rear of the rider seat as shown, remove the bolts with the hexagon wrench located under the passenger seat, and then pull the seat off.




1. Bolt



1. Hexagon wrench

To install the rider seat

1. Insert the projection into the seat holder as shown, then place the seat in the original position.

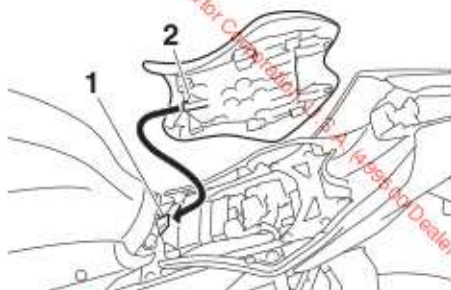

1. Seat holder

2. Projection

2. Install the bolts with the hexagon wrench.
3. Insert the hexagon wrench back into its holder.
4. Install the passenger seat.


TIP

Make sure that the seats are properly secured before riding.

Instrument and control functions

Rear view mirrors

The rear view mirrors of this vehicle can be folded forward or backward for parking in narrow spaces. Fold the mirrors back to their original position before riding.

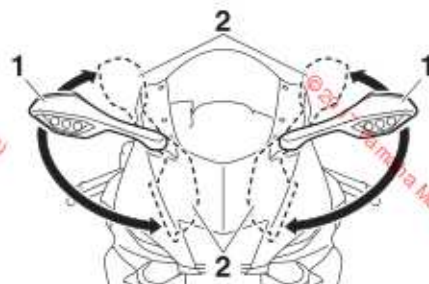

1. Riding position
2. Parking position

WARNING

Be sure to fold the rear view mirrors back to their original position before riding.

Adjusting the front fork

This model is equipped with adjustable suspension. The spring preload, rebound damping force, and compression damping force of each leg can be adjusted.

WARNING


Always adjust both fork legs equally, otherwise poor handling and loss of stability may result.

NOTICE

- Use extra care to avoid scratching the anodized finish of the adjusting nuts and bolts when making suspension adjustments.
- To avoid damaging the suspension's internal mechanisms, do not attempt to turn beyond the maximum or minimum settings.

Spring preload

To increase the spring preload and thereby harden the suspension, turn the adjusting nut on each fork in direction (a). To decrease the spring preload and thereby soften the suspension, turn the adjusting nut on each fork in direction (b).

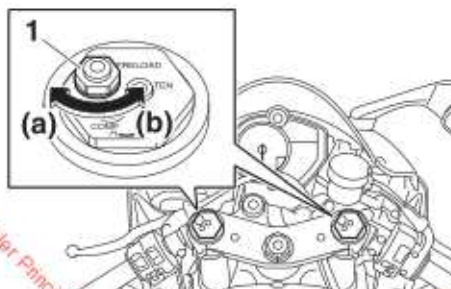

1. Spring preload adjusting nut

Spring preload setting:

Minimum (soft):

0 turn(s) in direction (a)*

Standard:

6 turn(s) in direction (a)*


Maximum (hard):

15 turn(s) in direction (a)*

* With the adjusting nut fully turned in direction (b)

Rebound damping force

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting bolt on each fork leg in direction (a). To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting bolt on each fork leg in direction (b).

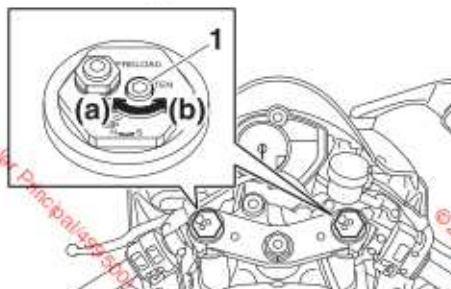

1. Rebound damping force adjusting bolt

Rebound damping setting:

Minimum (soft):

14 click(s) in direction (b)*

Standard:

7 click(s) in direction (b)*


Maximum (hard):

1 click(s) in direction (b)*

* With the adjusting bolt fully turned in direction (a)

Compression damping force

To increase the compression damping force and thereby harden the compression damping, turn the adjusting bolt on each fork leg in direction (a). To decrease the compression damping force and thereby soften the compression damping, turn the adjusting bolt on each fork leg in direction (b).

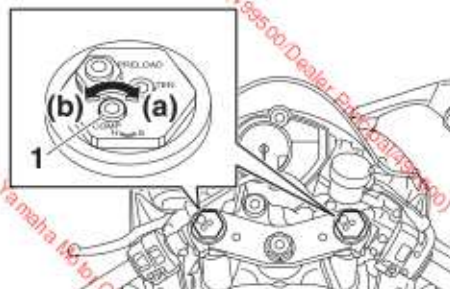

1. Compression damping force adjusting bolt

Compression damping setting:

Minimum (soft):

23 click(s) in direction (b)*

Standard:

14 click(s) in direction (b)*

Maximum (hard):

1 click(s) in direction (b)*

* With the adjusting bolt fully turned in direction (a)

Instrument and control functions

TIP

Although a damping force adjuster may turn or click beyond the stated minimum settings, such adjustments are ineffective and may damage the suspension.

Adjusting the shock absorber assembly

This model is equipped with adjustable suspension. The spring preload, rebound damping force, fast compression damping force, and slow compression damping force can be adjusted.

NOTICE

To avoid damaging the mechanism, do not attempt to turn beyond the maximum or minimum settings.


Spring preload

1. Loosen the locknut.
2. To increase the spring preload and thereby harden the suspension, turn the adjusting nut in direction (a). To decrease the spring preload and thereby soften the suspension, turn the adjusting nut in direction (b).


The spring preload setting is determined by measuring distance A. The longer distance A is, the higher the spring preload; the shorter distance A is, the lower the spring preload.

- Use the special wrench and the extension bar included in the owner's tool kit to make the adjustment.

Instrument and control functions

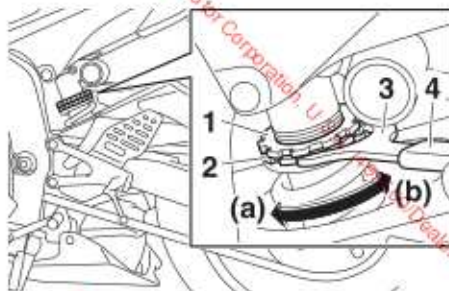

1. Locknut
2. Spring preload adjusting nut
3. Special wrench
4. Extension bar

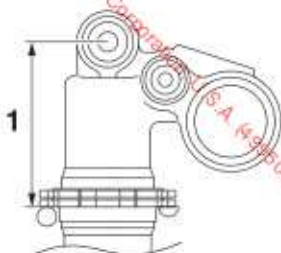

1. Distance A

Spring preload:

Minimum (soft):

Distance A = 84.9 mm (3.34 in)

Standard:

Distance A = 89.9 mm (3.54 in)

Maximum (hard):

Distance A = 92.9 mm (3.66 in)

3. Tighten the locknut to the specified torque. **NOTICE: Always tighten the locknut against the adjusting nut, and then tighten the locknut to the specified torque.** [ECA10122]


Tightening torque:

Locknut:

28 N·m (2.8 kgf·m, 20 lb·ft)

Rebound damping force

To increase the rebound damping force and thereby harden the rebound damping, turn the adjusting bolt in direction (a). To decrease the rebound damping force and thereby soften the rebound damping, turn the adjusting bolt in direction (b).

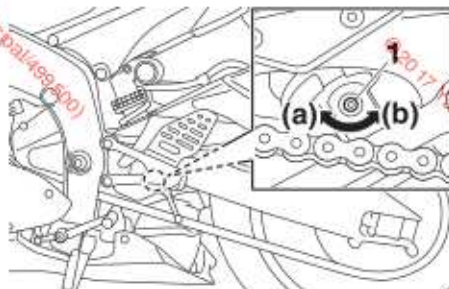

1. Rebound damping force adjusting bolt

Rebound damping setting:

Minimum (soft):

23 click(s) in direction (b)*

Standard:

12 click(s) in direction (b)*

Maximum (hard):

1 click(s) in direction (b)*


* With the adjusting bolt fully turned in direction (a)

Compression damping force

Fast compression damping force

To increase the compression damping force and thereby harden the fast compression damping, turn the adjusting bolt in direction (a). To decrease the compression damping force and thereby soften the compression damping, turn the adjusting bolt in direction (b).

Instrument and control functions

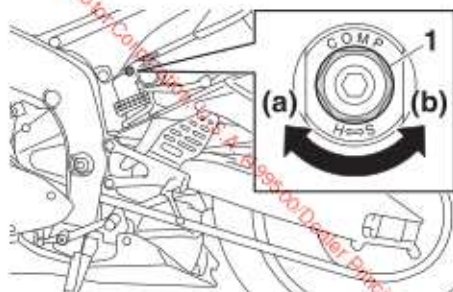

1. Fast compression damping force adjusting bolt

Fast compression damping setting

Minimum (soft):

5.5 turn(s) in direction (b)*

Standard:

3 turn(s) in direction (b)*


Maximum (hard):

0 turn(s) in direction (b)*

* With the adjusting bolt fully turned in direction (a)

Slow compression damping force

To increase the compression damping force and thereby harden the slow compression damping, turn the adjusting bolt in direction (a). To decrease the compression damping force and thereby soften the compression damping, turn the adjusting bolt in direction (b).

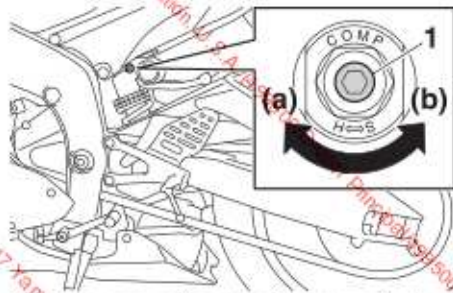

1. Slow compression damping force adjusting bolt

Slow compression damping setting

Minimum (soft):

18 click(s) in direction (b)*

Standard:

14 click(s) in direction (b)*

Maximum (hard):

1 click(s) in direction (b)*

* With the adjusting bolt fully turned in direction (a)

TIP

Although a damping force adjuster may turn or click beyond the stated minimum settings, such adjustments are ineffective and may damage the suspension.



WARNING

EWA10222

This shock absorber assembly contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber assembly.

- Do not tamper with or attempt to open the cylinder assembly.
- Do not subject the shock absorber assembly to an open flame or other high heat source. This may cause the unit to explode due to excessive gas pressure.
- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
- Do not dispose of a damaged or worn-out shock absorber assembly yourself. Take the shock absorber assembly to a Yamaha dealer for any service.

Instrument and control functions

EAU15283

EXUP system

This model is equipped with Yamaha's EXUP (EXhaust Ultimate Power valve) system. This system boosts engine power by means of a valve that regulates the inner diameter of the exhaust pipe. The EXUP system valve is constantly adjusted in accordance with the engine speed by a computer-controlled servomotor.

ECG10192

NOTICE

- The EXUP system has been set and extensively tested at the Yamaha factory. Changing these settings without sufficient technical knowledge may result in poor performance of or damage to the engine.
- If the EXUP system cannot be heard when the main switch is turned on, have a Yamaha dealer check it.

EAU170641

Auxiliary DC connector

This vehicle is equipped with an auxiliary DC connector. Consult your Yamaha dealer before installing any accessories.

Instrument and control functions

EAU15306

Sidestand

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

TIP

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations. (See the following section for an explanation of the ignition circuit cut-off system.)

EWA10242

WARNING

The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check this system regularly and have a Yamaha dealer repair it if it does not function properly.

EAU56730

Ignition circuit cut-off system

The ignition circuit cut-off system (comprising the sidestand switch, clutch switch and neutral switch) has the following functions.

- It prevents starting when the transmission is in gear and the sidestand is up, but the clutch lever is not pulled.
- It prevents starting when the transmission is in gear and the clutch lever is pulled, but the sidestand is still down.
- It cuts the running engine when the transmission is in gear and the sidestand is moved down.

Periodically check the operation of the ignition circuit cut-off system according to the following procedure.

Instrument and control functions

With the engine turned off:

1. Move the sidestand down.
2. Make sure that the engine stop switch is set to "O".
3. Turn the key on.
4. Shift the transmission into the neutral position.
5. Push the start switch.

Does the engine start?

YES

NO

WARNING

If a malfunction is noted, have a Yamaha dealer check the system before riding.

The neutral switch may not be working correctly.

The motorcycle should not be ridden until checked by a Yamaha dealer.

With the engine still running:

6. Move the sidestand up.
7. Keep the clutch lever pulled.
8. Shift the transmission into gear.
9. Move the sidestand down.

Does the engine stall?

YES

NO

The sidestand switch may not be working correctly.

The motorcycle should not be ridden until checked by a Yamaha dealer.

After the engine has stalled:

10. Move the sidestand up.
11. Keep the clutch lever pulled.
12. Push the start switch.

Does the engine start?

YES

NO

The clutch switch may not be working correctly.

The motorcycle should not be ridden until checked by a Yamaha dealer.

The system is OK. The motorcycle can be ridden.

For your safety – pre-operation checks

EAU63440

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152

WARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	<ul style="list-style-type: none">• Check fuel level in fuel tank.• Refuel if necessary.• Check fuel line for leakage.• Check fuel tank breather hose and overflow hose for obstructions, cracks or damage, and check hose connections.	5-18, 5-19
Engine oil	<ul style="list-style-type: none">• Check oil level in engine.• If necessary, add recommended oil to specified level.• Check vehicle for oil leakage.	8-13
Coolant	<ul style="list-style-type: none">• Check coolant level in reservoir.• If necessary, add recommended coolant to specified level.• Check cooling system for leakage.	8-17
Front brake	<ul style="list-style-type: none">• Check operation.• If soft or spongy, have Yamaha dealer bleed hydraulic system.• Check brake pads for wear.• Replace if necessary.• Check fluid level in reservoir.• If necessary, add specified brake fluid to specified level.• Check hydraulic system for leakage.	8-26, 8-27
Rear brake	<ul style="list-style-type: none">• Check operation.• If soft or spongy, have Yamaha dealer bleed hydraulic system.• Check brake pads for wear.• Replace if necessary.• Check fluid level in reservoir.• If necessary, add specified brake fluid to specified level.• Check hydraulic system for leakage.	8-26, 8-27
Clutch	<ul style="list-style-type: none">• Check operation.• Lubricate cable if necessary.• Check lever free play.• Adjust if necessary.	8-24

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Throttle grip	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable and grip housing. 	8-20, 8-31
Control cables	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate if necessary. 	8-31
Drive chain	<ul style="list-style-type: none"> • Check chain slack. • Adjust if necessary. • Check chain condition. • Lubricate if necessary. 	8-29, 8-30
Wheels and tires	<ul style="list-style-type: none"> • Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary. 	8-21, 8-24
Brake and shift pedals	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate pedal pivoting points if necessary. 	8-32
Brake and clutch levers	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate lever pivoting points if necessary. 	8-32
Sidestand	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate pivot if necessary. 	8-33
Chassis fasteners	<ul style="list-style-type: none"> • Make sure that all nuts, bolts and screws are properly tightened. • Tighten if necessary. 	—
Instruments, lights, signals and switches	<ul style="list-style-type: none"> • Check operation. • Correct if necessary. 	—
Sidestand switch	<ul style="list-style-type: none"> • Check operation of ignition circuit cut-off system. • If system is not working correctly, have Yamaha dealer check vehicle. 	5-28

Operation and important riding points

EAU15952

EAU73450

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272

WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

TIP

This model is equipped with:

- a lean angle sensor to stop the engine in case of turnover. In this case, turn the key "OFF" and then to "ON" before attempting to restart the engine. Failing to do so will prevent the engine from starting even though the engine will crank when the start switch is pushed.
- an engine auto-stop system. The engine stops automatically if left idling for 20 minutes. In this case, simply push the start switch to restart the engine.

Operation and important riding points

EALU79942

Starting the engine

In order for the ignition circuit cut-off system (page 5-28) to enable starting, one of the following conditions must be met:

- The transmission is in the neutral position.
- The transmission is in gear with the clutch lever pulled and the sidestand up.

3. Shift the transmission into the neutral position (or hold the clutch lever pulled with the sidestand up).
4. Push the start switch "⊞" to crank the engine with the starter.
Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11643

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!

To start the engine

1. Turn the key to "ON" and make sure that the engine stop switch is set to "○".
2. Confirm that the following lights perform a circuit check (come on for a few seconds and then go off).
 - Engine trouble warning light
 - ABS warning light*
 - Oil level warning light
 - Fuel level warning light*
 - Coolant temperature warning light
 - Traction control system indicator light
 - Shift timing indicator light

TIP

- The ABS warning light should come on and stay on until the vehicle reaches a traveling speed of 10 km/h (6 mi/h).
- The fuel level warning light will stay on if you are low on fuel.


ECA24110

NOTICE

If a warning or indicator light does not work as described above, have a Yamaha dealer check the vehicle.

Operation and important riding points

Shifting

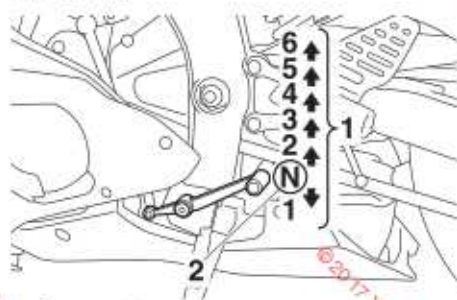

1. Gear positions
2. Neutral position

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.

The gear positions are shown in the illustration.

TIP

To shift the transmission into the neutral position, press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

NOTICE

- Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, and do not tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.
- Always use the clutch while changing gears to avoid damaging the engine, transmission,

and drive train, which are not designed to withstand the shock of forced shifting.

To start out and accelerate

1. Pull the clutch lever to disengage the clutch.
2. Shift the transmission into first gear. The neutral indicator light should go out.
3. Open the throttle gradually, and at the same time, release the clutch lever slowly.
4. At the recommended shift points shown in the following table, close the throttle, and at the same time, quickly pull the clutch lever in.
5. Shift the transmission into second gear. (Make sure not to shift the transmission into the neutral position.)
6. Open the throttle part way and gradually release the clutch lever.
7. Follow the same procedure when shifting to the next higher gear.

TIP

When shifting gears in normal operating conditions, use the recommended shift points.

To decelerate

1. Release the throttle and apply both the front and the rear brakes smoothly to slow the motorcycle.
2. At the recommended shift points shown in the following table, shift to a lower gear.
3. When the motorcycle reaches 25 km/h (16 mph), the engine is about to stall or runs roughly, pull the

Operation and important riding points

EAU16842

clutch lever in, use the brakes to slow the motorcycle, and continue to downshift as necessary.

- Once the motorcycle has stopped, the transmission can be shifted into the neutral position. The neutral indicator light should come on and then the clutch lever can be released.

EWA17380

WARNING

- **Improper braking can cause loss of control or traction. Always use both brakes and apply them smoothly.**
- **Make sure that the motorcycle and the engine have sufficiently slowed before shifting to a lower gear. Engaging a lower gear when the vehicle or engine speed is too high could make the rear wheel lose traction or the engine to over-rev. This could cause loss of control, an accident and injury. It could also cause engine or drive train damage.**

EAU64190

Recommended shift points

The recommended shift points during acceleration and deceleration are shown in the table below.

Shift up points:

- 1st → 2nd: 20 km/h (12 mph)
- 2nd → 3rd: 30 km/h (19 mph)
- 3rd → 4th: 40 km/h (25 mph)
- 4th → 5th: 50 km/h (31 mph)
- 5th → 6th: 60 km/h (37 mph)

Shift down points:

- 6th → 5th: 45 km/h (28 mph)
- 5th → 4th: 35 km/h (22 mph)
- 4th → 3rd: 25 km/h (16 mph)

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1600 km (1000 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1600 km (1000 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU17086

0-1000 km (0-600 mi)

Avoid prolonged operation above 8300 r/min. **NOTICE:** After 1000 km (600 mi) of operation, the engine oil must be changed and the oil filter cartridge or element replaced. [ECA10303]

1000-1600 km (600-1000 mi)

Avoid prolonged operation above 9900 r/min.

1600 km (1000 mi) and beyond

The vehicle can now be operated normally.

ECA10311

NOTICE

- **Keep the engine speed out of the tachometer red zone.**
- **If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.**

Operation and important riding points

EAU17214

TIP

During and after the engine break-in period, the exhaust heat may cause discoloration of the exhaust pipe, but this is normal.

Parking

When parking, stop the engine, and then remove the key from the main switch.

EWA10312



WARNING

- Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.
- Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.
- Do not park near grass or other flammable materials which might catch fire.

Periodic maintenance and adjustment

EAU17246

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

EWA15123

WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.
- Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to

death. See page 2-3 for more information about carbon monoxide.

EWA15461

WARNING

Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

Periodic maintenance and adjustment


EAU17303

EAU57080

Emission controls not only function to ensure cleaner air, but are also vital to proper engine operation and maximum performance. In the following periodic maintenance charts, the services related to emissions control are grouped separately. These services require specialized data, knowledge, and equipment. Maintenance, replacement, or repair of the emission control devices and systems may be performed by any repair establishment or individual that is certified (if applicable). Yamaha dealers are trained and equipped to perform these particular services.

Owner's tool kit

The owner's tool kit should be stored separately from the vehicle. However, there are two hexagon wrenches stored under the passenger seat. (See page 5-20.)

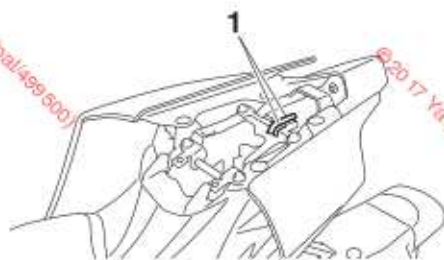

1. Hexagon wrench

The service information included in this manual and the tools provided are intended to assist you in the performance of preventive maintenance and minor repairs. However, additional tools, such as a torque wrench, are necessary to perform certain maintenance work correctly.

TIP

If you do not have the tools or experience required for a particular job, have a Yamaha dealer perform it for you.

Periodic maintenance and adjustment

EAU48491

TIP

- From 24000 mi (37000 km) or 36 months, repeat the maintenance intervals starting from 8000 mi (13000 km) or 12 months.
- Items marked with an asterisk require special tools, data and technical skills, have a Yamaha dealer perform the service.

EAU63292

Periodic maintenance chart for the emission control system

No.	ITEM	ROUTINE	ODOMETER READINGS					
			INITIAL	4	8	12	16	20
			0.6	4	8	12	16	20
			1	7	13	19	25	31
		month	1	6	12	18	24	30
			1	6	12	18	24	30
1	* Fuel line	<ul style="list-style-type: none"> • Check fuel hoses for cracks or damage. • Replace if necessary. 		✓	✓		✓	✓
2	* Spark plugs	<ul style="list-style-type: none"> • Check condition. • Adjust gap and clean. • Replace. 		✓		✓		✓
3	* Valve clearance	<ul style="list-style-type: none"> • Check and adjust valve clearance when engine is cold. 	Every 26600 mi (42000 km)					
4	* Crankcase breather system	<ul style="list-style-type: none"> • Check breather hose for cracks or damage. • Replace if necessary. 		✓	✓	✓	✓	✓
5	* Fuel injection	<ul style="list-style-type: none"> • Adjust synchronization. 		✓	✓	✓	✓	✓
6	* Exhaust system	<ul style="list-style-type: none"> • Check for leakage. • Tighten if necessary. • Replace gasket(s) if necessary. 		✓	✓	✓	✓	✓
7	* Evaporative emission control system (for California only)	<ul style="list-style-type: none"> • Check control system for damage. • Replace if necessary. 				✓		✓
8	* Air induction system	<ul style="list-style-type: none"> • Check the air cut-off valve, reed valve, and hose for damage. • Replace any damaged parts. 			✓		✓	

Periodic maintenance and adjustment

EAU63453

General maintenance and lubrication chart

No.	ITEM	ROUTINE × 1000 mi × 1000 km month	INITIAL	ODOMETER READINGS					
			0.6	4	8	12	16	20	
			1	7	13	19	25	31	
			1	6	12	18	24	30	
1	Diagnostic system check	<ul style="list-style-type: none"> Perform dynamic inspection using Yamaha diagnostic tool. Check the error codes. 	✓	✓	✓	✓	✓	✓	
2	Air filter element	<ul style="list-style-type: none"> Replace. 	Every 24000 mi (37000 km)						
3	Clutch	<ul style="list-style-type: none"> Check operation. Adjust or replace cable. 	✓	✓	✓	✓	✓	✓	
4	Front brake	<ul style="list-style-type: none"> Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary. 	✓	✓	✓	✓	✓	✓	
5	Rear brake	<ul style="list-style-type: none"> Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary. 	✓	✓	✓	✓	✓	✓	
6	Brake hoses	<ul style="list-style-type: none"> Check for cracks or damage. Check for correct routing and clamping. Replace. 		✓	✓	✓	✓	✓	
7	Brake fluid	<ul style="list-style-type: none"> Change. 	Every 2 years						
8	Wheels	<ul style="list-style-type: none"> Check runout and for damage. Replace if necessary. 		✓	✓	✓	✓	✓	
9	Tires	<ul style="list-style-type: none"> Check tread depth and for damage. Replace if necessary. Check air pressure. Correct if necessary. 		✓	✓	✓	✓	✓	
10	Wheel bearings	<ul style="list-style-type: none"> Check bearings for smooth operation. Replace if necessary. 		✓	✓	✓	✓	✓	
11	Swingarm pivot bearings	<ul style="list-style-type: none"> Check bearing assemblies for looseness. Moderately repack with lithium-soap-based grease. 			✓				
12	Drive chain	<ul style="list-style-type: none"> Check chain slack, alignment and condition. Adjust and lubricate chain with a special O-ring chain lubricant thoroughly. 	Every 600 mi (1000 km) and after washing the motorcycle, riding in the rain or riding in wet areas						

Periodic maintenance and adjustment

No.	ITEM	ROUTINE × 1000 mi × 1000 km month	INITIAL	ODOMETER READINGS				
			0.6	4	8	12	16	20
			1	7	13	19	25	31
			1	6	12	18	24	30
13	Steering bearings	<ul style="list-style-type: none"> Check bearing assemblies for looseness. Moderately repack with lithium-soap-based grease. 	✓	✓	✓	✓	✓	✓
14	Chassis fasteners	<ul style="list-style-type: none"> Check all chassis fitting and fasteners. Correct if necessary. 		✓	✓	✓	✓	✓
15	Brake lever pivot shaft	<ul style="list-style-type: none"> Apply silicone grease lightly. 		✓		✓	✓	✓
16	Brake pedal pivot shaft	<ul style="list-style-type: none"> Apply lithium-soap-based grease lightly. 		✓	✓	✓	✓	✓
17	Clutch lever pivot shaft	<ul style="list-style-type: none"> Apply lithium-soap-based grease lightly. 		✓	✓	✓	✓	✓
18	Shift pedal pivot shaft	<ul style="list-style-type: none"> Apply lithium-soap-based grease lightly. 		✓	✓	✓	✓	✓
19	Sidestand pivot	<ul style="list-style-type: none"> Check operation. Apply lithium-soap-based grease lightly. 		✓	✓	✓	✓	✓
20	Sidestand switch	<ul style="list-style-type: none"> Check operation and replace if necessary. 	✓	✓	✓	✓	✓	✓
21	Front fork	<ul style="list-style-type: none"> Check operation and for oil leakage. Replace if necessary. 		✓		✓	✓	✓
22	Shock absorber assembly	<ul style="list-style-type: none"> Check operation and for oil leakage. Replace if necessary. 		✓	✓	✓	✓	✓
23	Rear suspension link pivots	<ul style="list-style-type: none"> Check operation. Correct if necessary. 			✓		✓	
24	Engine oil	<ul style="list-style-type: none"> Change (warm engine before draining). 	✓	✓	✓	✓	✓	✓
25	Engine oil filter cartridge	<ul style="list-style-type: none"> Replace. 	✓		✓		✓	
26	Cooling system	<ul style="list-style-type: none"> Check hoses for cracks or damage. Replace if necessary. Change coolant. 		✓	✓	✓	✓	✓
27	Front and rear brake switches	<ul style="list-style-type: none"> Check operation. 	✓	✓	✓	✓	✓	✓

Periodic maintenance and adjustment

No.	ITEM	ROUTINE × 1000 mi × 1000 km month	INITIAL	ODOMETER READINGS					
			0.6	4	8	12	16	20	
			1	7	13	19	25	31	
			1	6	12	18	24	30	
28	Control cables	<ul style="list-style-type: none"> Apply Yamaha cable lubricant or other suitable cable lubricant thoroughly. 	✓	✓	✓	✓	✓	✓	
29	Throttle grip	<ul style="list-style-type: none"> Check operation. Check throttle grip free play, and adjust if necessary. Lubricate cable and grip housing. 		✓	✓	✓	✓	✓	
30	Lights, signals and switches	<ul style="list-style-type: none"> Check operation. Adjust headlight beam. 	✓	✓	✓	✓	✓	✓	

EAU80500

TIP


- Air filter
 - This model's air filter uses a disposable oil-coated paper element. This element cannot be cleaned with compressed air, doing so will only damage it.
 - The air filter element needs to be replaced more frequently when riding in unusually wet or dusty areas.
- Hydraulic brake service
 - Regularly check the front and rear brake fluid levels. Replenish if necessary.
 - Every two years replace the rear brake master cylinder, the internal components of the front brake master cylinder, the brake calipers, and change the brake fluid.
 - Replace the brake hoses every four years or sooner if cracked or damaged.

Periodic maintenance and adjustment

EAU18713


Removing and installing cowlings and panels

The cowlings and panels shown need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time a cowling or panel needs to be removed and installed.

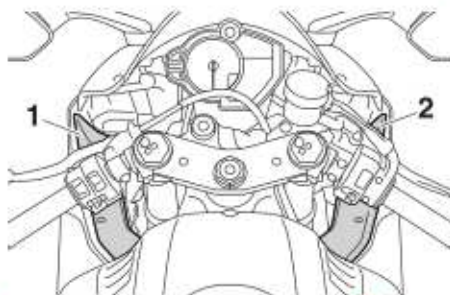

1. Panel A
2. Panel B

EAU75983

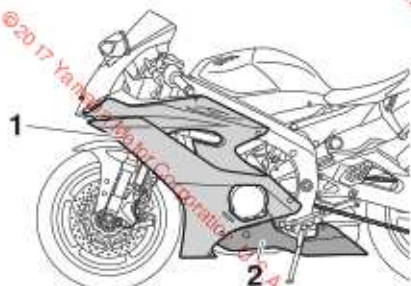


1. Cowling A
2. Cowling B


Cowling A

To remove the cowling

1. Remove panel A. (See page 8-11.)
2. Remove the bolts, quick fasteners, and quick fastener screw.

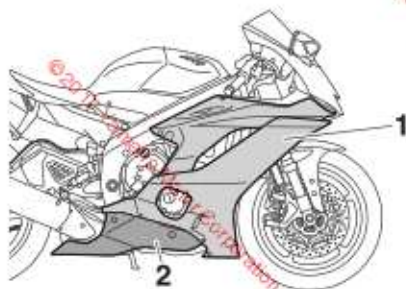


1. Cowling C
2. Cowling D

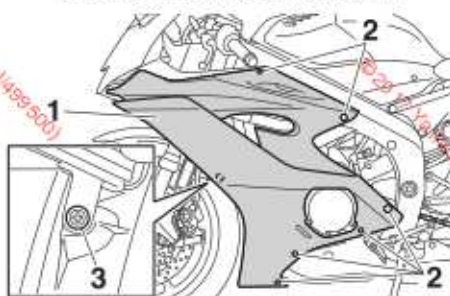

1. Cowling A
2. Bolt
3. Quick fastener screw

Periodic maintenance and adjustment

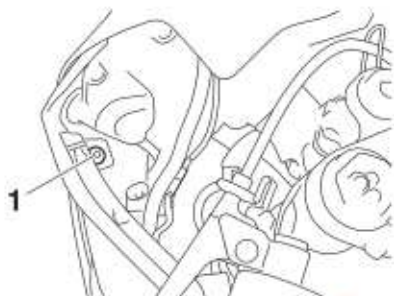

1. Bolt



1. Cowling A

To install the cowling

1. Slide the cowling rearward, and then fit the upper projections into the slots.




1. Quick fastener

3. Slide the cowling as shown.




1. Cowling A

2. Slide the cowling as shown.

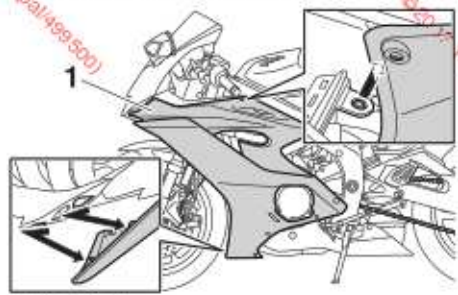

1. Cowling A

4. Remove the upper projections from the slots, and then slide the cowling forward.

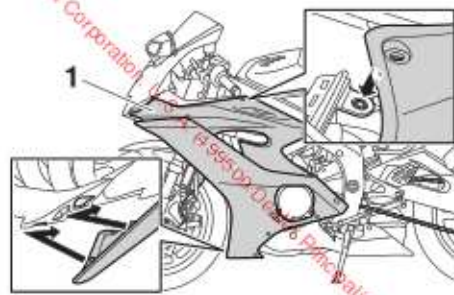

1. Cowling A

3. Install the bolts, quick fasteners, and quick fastener screw.

Periodic maintenance and adjustment

TIP


Install the bolts loosely, then install the quick fasteners and quick fastener screw, and then tighten the bolts.

4. Install the panel.


Cowling B

To remove the cowling


1. Remove panel A and cowling A. (See page 8-11.)
2. Remove cowling B by removing the bolts.

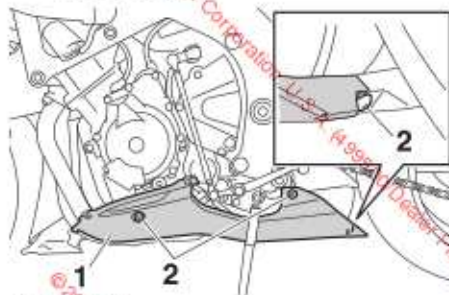

1. Cowling B
2. Bolt

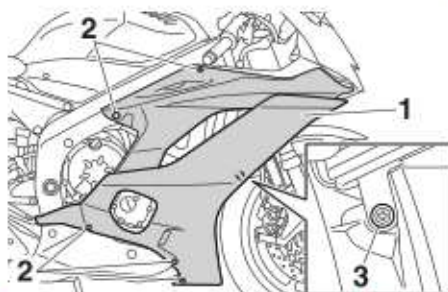

1. Cowling C
2. Bolt
3. Quick fastener screw

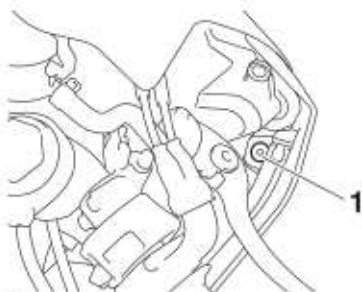

1. Bolt


To install the cowling

1. Place cowling B in its original position, and then install the bolts.
2. Install cowling A and panel A.

Cowling C

To remove the cowling


1. Remove panel B. (See page 8-11.)
2. Remove the bolts, quick fastener, and quick fastener screw.

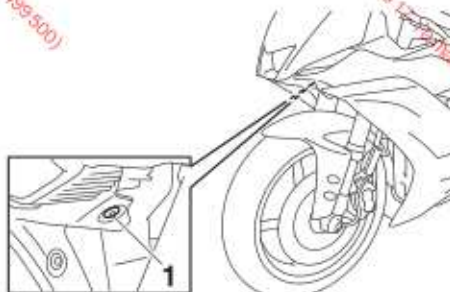

1. Quick fastener

3. Slide the cowling as shown.

Periodic maintenance and adjustment

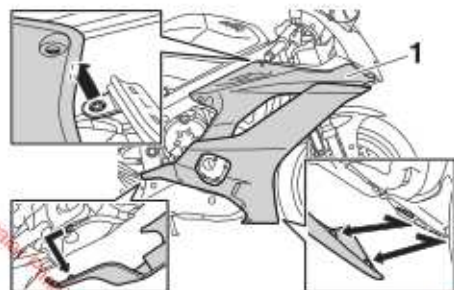

1. Cowling C

4. Remove the cowling by removing the upper projections from the slots.



1. Cowling C

To install the cowling

1. Fit the upper projections into the slots.



1. Cowling C

2. Slide the cowling as shown.



1. Cowling C

3. Install the bolts, quick fastener, and quick fastener screw.

TIP


Install the bolts loosely, then install the quick fastener and quick fastener screw, and then tighten the bolts.

4. Install the panel.

Cowling D

To remove the cowling

1. Remove panel B and cowling C. (See page 8-11.)
2. Remove cowling D by removing the bolts.

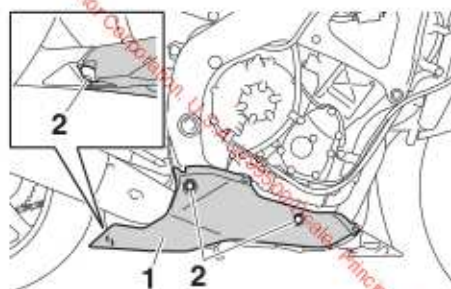

1. Cowling D

2. Bolt

To install the cowling

1. Place cowling D in its original position, and then install the bolts.

Periodic maintenance and adjustment

EAU19653


2. Install cowling C and panel B.

Panels A and B

EAUJ79970

To remove a panel


Remove the quick fasteners, and then pull the panel off as shown.

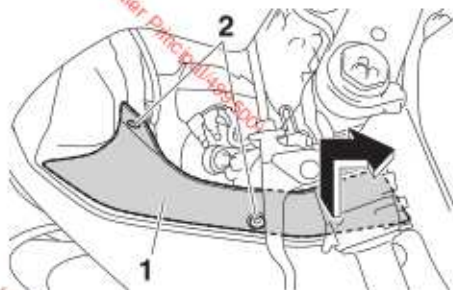

1. Panel A
2. Quick fastener

To install a panel

Place the panel in the original position, and then install the quick fasteners.

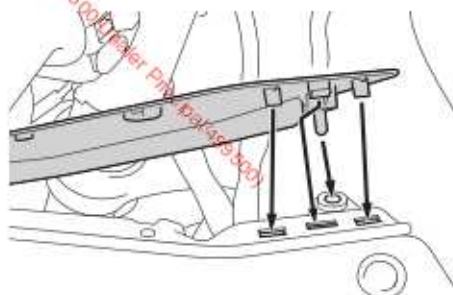

Checking the spark plugs

The spark plugs are important engine components, which should be checked periodically, preferably by a Yamaha dealer. Since heat and deposits will cause any spark plug to slowly erode, they should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plugs can reveal the condition of the engine.

The porcelain insulator around the center electrode of each spark plug should be a medium-to-light tan (the ideal color when the vehicle is ridden normally), and all spark plugs installed in the engine should have the same color. If any spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.


If a spark plug shows signs of electrode erosion and excessive carbon or other deposits, it should be replaced.

Specified spark plug:
NGK/CR10EK

Before installing a spark plug, the spark plug gap should be measured with a wire thickness gauge and, if necessary, adjusted to specification.

Periodic maintenance and adjustment

EAU19683

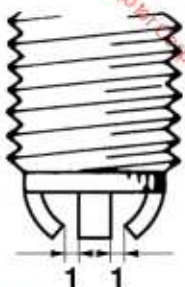

1. Spark plug gap

Spark plug gap:

0.6–0.7 mm (0.024–0.028 in)

Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.

Tightening torque:

Spark plug:

13 N·m (1.3 kgf·m, 9.4 lb·ft)

TIP


8

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

NOTICE

Do not use any tools to remove or install the spark plug cap, otherwise the ignition coil coupler may get damaged. The spark plug cap may be difficult to remove because the rubber seal on the end of the cap fits tightly. To remove the spark plug cap, simply twist it back and forth while pulling it out; to install it, twist it back and forth while pushing it in.

Canister (for California)

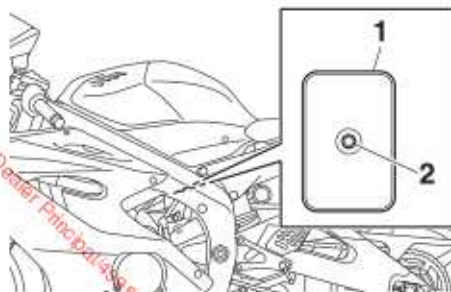

1. Canister

2. Canister breather

This model is equipped with a canister to prevent the discharging of fuel vapor into the atmosphere. Before operating this vehicle, make sure to check the following:

- Check each hose connection.
- Check each hose and canister for cracks or damage. Replace if damaged.
- Make sure that the canister breather is not blocked, and if necessary, clean it.

Periodic maintenance and adjustment

EAU3899H

Engine oil and oil filter cartridge


The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil filter cartridge replaced at the intervals specified in the periodic maintenance and lubrication chart.

To check the engine oil level

1. Place the vehicle on a level surface and hold it in an upright position. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes until the oil settles.
4. Remove the engine oil dipstick and wipe it clean, insert it back into the hole (without screwing it in), and then remove it again to check the oil level.


TIP

The engine oil should be between the minimum and maximum level marks.

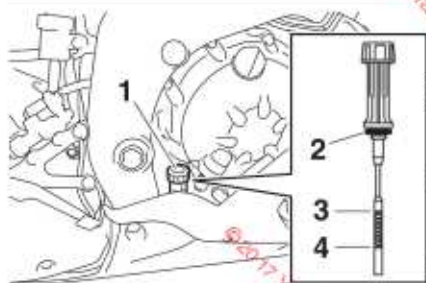

1. Engine oil dipstick
2. O-ring
3. Maximum level mark
4. Minimum level mark

5. Check the dipstick O-ring for damage, and replace it if necessary.
6. If the engine oil is at or below the minimum level mark, remove the engine oil filler cap, and then add sufficient oil of the recommended type to raise it to the correct level.

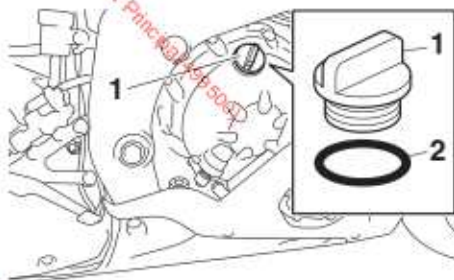

1. Engine oil filler cap
2. O-ring

7. Check the filler cap O-ring for damage, and replace it if necessary.
8. Insert and tighten the engine oil dipstick, and then install and tighten the oil filler cap.

To change the engine oil (with or without oil filter cartridge replacement)

1. Place the vehicle on a level surface.
2. Remove cowlings A and B. (See page 8-7.)
3. Start the engine, warm it up for several minutes, and then turn it off.
4. Place an oil pan under the engine to collect the used oil.

Periodic maintenance and adjustment

5. Remove the engine oil filler cap, the engine oil drain bolt and its gasket to drain the oil from the crankcase.




1. Engine oil drain bolt
2. Gasket

TIP


Skip steps 6–12 if the oil filter cartridge is not being replaced.

6. Remove the shift arm bolt, and then pull the shift arm off the shift shaft.
7. Remove the fuel tank breather hose and overflow hose from the guides.

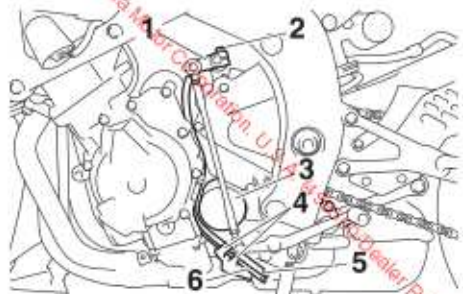

1. Shift arm
2. Shift arm bolt
3. Oil filter cartridge
4. Guide
5. Fuel tank breather hose (U49 models)
6. Fuel tank overflow hose

8. Remove the oil filter cartridge with an oil filter wrench.

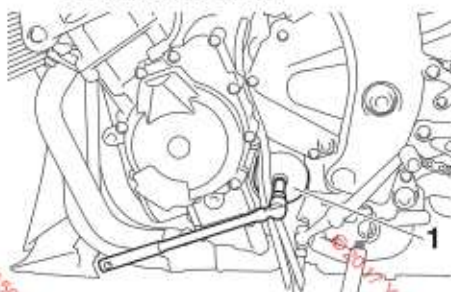


1. Oil filter wrench

TIP

An oil filter wrench is available at a Yamaha dealer.

9. Apply a thin coat of clean engine oil to the O-ring of the new oil filter cartridge.

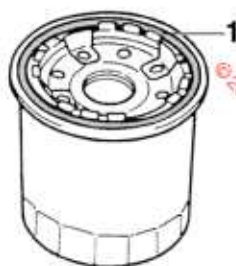


1. O-ring

TIP

Make sure that the O-ring is properly seated.

10. Install the new oil filter cartridge with an oil filter wrench, and then tighten it to the specified torque with a torque wrench.

Periodic maintenance and adjustment

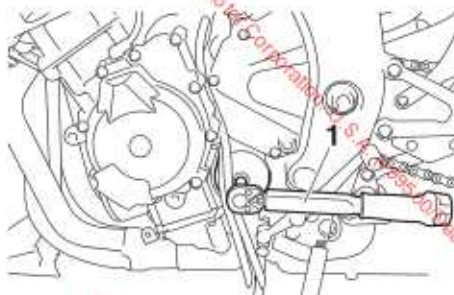


1. Torque wrench

Tightening torque:

Oil filter cartridge:

17 N·m (1.7 kgf·m, 12 lb·ft)

11. Install the fuel tank breather hose and overflow hose into the guides, then place them in their original position.
12. Install the shift arm by aligning the slot in the shift arm with the mark on the shift shaft and installing the shift arm bolt, then tightening it to the specified torque. **NOTICE: Be sure to align the slot and mark to ensure proper shifting. If the slot and mark are not aligned, the shift arm will not move correctly and you may not be able to shift up or down.** (SCA24140)

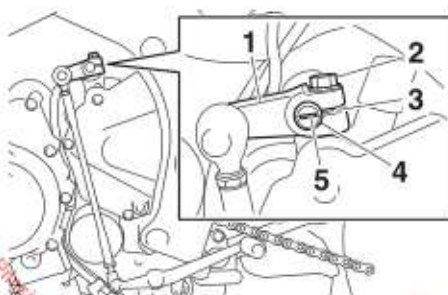

1. Shift arm
2. Shift arm bolt
3. Slot
4. Shift shaft
5. Mark

Tightening torque:

Shift arm bolt:

10 N·m (1.0 kgf·m, 7.2 lb·ft)

13. Install the engine oil drain bolt and its new gasket, and then tighten the bolt to the specified torque.

Tightening torque:

Engine oil drain bolt:

43 N·m (4.3 kgf·m, 31 lb·ft)

14. Refill with the specified amount of the recommended engine oil.

Recommended engine oil:

See page 10-1.

Oil quantity:

Oil change:

2.40 L (2.54 US qt, 2.11 Imp.qt)

With oil filter removal:

2.60 L (2.75 US qt, 2.29 Imp.qt)

TIP

Be sure to wipe off spilled oil on any parts after the engine and exhaust system have cooled down.

Periodic maintenance and adjustment

ECA1162

20. Install the cowlings.

NOTICE

- In order to prevent clutch slip-page (since the engine oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of "CD" or oils of a higher quality than specified. In addition, do not use oils labeled "ENERGY CONSERVING II" or higher.
- Make sure that no foreign material enters the crankcase.

15. Check the filler cap O-ring for damage, and replace it if necessary.
16. Install and tighten the oil filler cap.
17. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.

8

TIP

After the engine is started, the engine oil level warning light should go off if the oil level is sufficient.

ECA10402

NOTICE

If the oil level warning light flickers or remains on even if the oil level is correct, immediately turn the engine off and have a Yamaha dealer check the vehicle.

18. Turn the engine off, and then check the oil level and correct it if necessary.
19. Check the dipstick O-ring for damage, and replace it if necessary.

Periodic maintenance and adjustment

Coolant

The coolant level should be checked before each ride. In addition, the coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart.

To check the coolant level


1. Place the vehicle on a level surface and hold it in an upright position.

TIP

- The coolant level must be checked on a cold engine since the level varies with engine temperature.
 - Make sure that the vehicle is positioned straight up when checking the coolant level. A slight tilt to the side can result in a false reading.
2. Check the coolant level in the coolant reservoir.

TIP

The coolant should be between the minimum and maximum level marks.

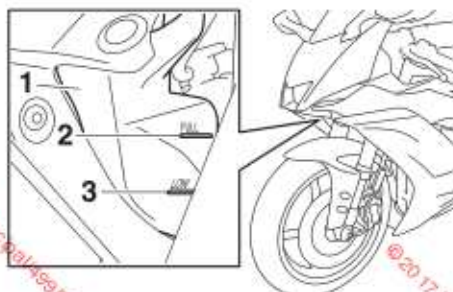


1. Coolant reservoir
2. Maximum level mark
3. Minimum level mark

3. If the coolant is at or below the minimum level mark, remove panel B to access the coolant reservoir. (See page 8-7.)

4. Remove the coolant reservoir cap, add coolant to the maximum level mark, and then install the reservoir cap. **WARNING!** Remove only the coolant reservoir cap. Never attempt to remove the radiator cap when the engine is hot.

NOTICE: If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been added to the coolant, have a Yamaha dealer check the anti-freeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced. [ECA10473]

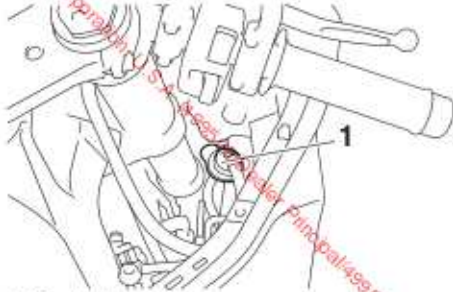

1. Coolant reservoir cap

Coolant reservoir capacity (up to the maximum level mark):

0.25 L (0.26 US qt, 0.22 Imp.qt)


Periodic maintenance and adjustment

5. Install the panel.

To change the coolant


1. Place the vehicle on a level surface and let the engine cool if necessary.
2. Remove panel B and cowling C. (See page 8-7.)
3. Place a container under the engine to collect the used coolant.
4. Remove the radiator cap.

WARNING! Never attempt to remove the radiator cap when the engine is hot. [EWA10082]

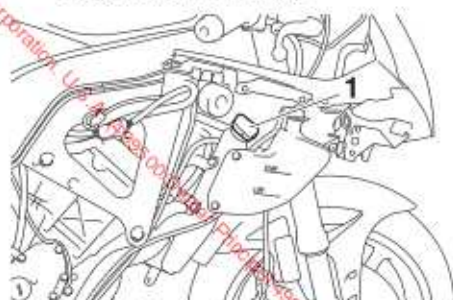


1. Radiator cap

5. Remove the coolant drain bolt and its gasket to drain the cooling system.

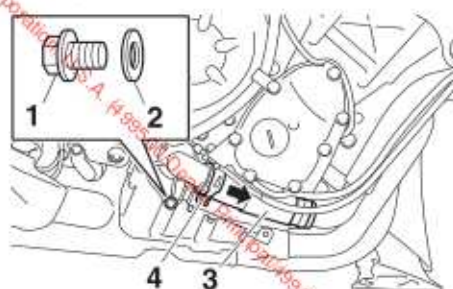

1. Coolant drain bolt
2. Gasket
3. Radiator hose
4. Hose clamp

6. Move the hose clamp in the direction shown, and then disconnect the radiator hose to drain the radiator.
7. Remove the coolant reservoir by removing the bolts.
8. Remove the coolant reservoir cap, and then turn the coolant reservoir upside down to empty it.

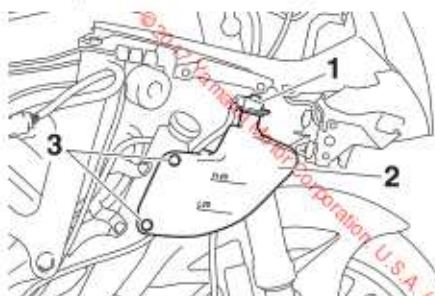

1. Coolant reservoir cap
2. Coolant reservoir
3. Bolt

9. After the coolant is completely drained, thoroughly flush the cooling system with clean tap water.
10. Install the coolant reservoir by installing the bolts.
11. Connect the radiator hose, and then move the hose clamp back to its original position.
12. Install the coolant drain bolt and its new gasket, and then tighten the bolt to the specified torque.

Tightening torque:

Coolant drain bolt:
10 N·m (1.0 kgf·m, 7.2 lb·ft)

13. Pour the recommended coolant into the reservoir to the maximum level mark, and then install the coolant reservoir cap.

Periodic maintenance and adjustment

EAU36766

14. Pour the recommended coolant into the radiator until it is full.

Antifreeze/water mixture ratio:

1:1

Recommended antifreeze:

High-quality ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines

Coolant quantity:

Radiator (including all routes):

2.30 L (2.43 US qt, 2.02 Imp.qt)

Coolant reservoir (up to the maximum level mark):

0.25 L (0.26 US qt, 0.22 Imp.qt)

Air filter element

The air filter element must be replaced at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer replace the air filter element.

15. Install the radiator cap, start the engine, let it idle for several minutes, and then turn it off.
16. Remove the radiator cap to check the coolant level in the radiator. If necessary, add sufficient coolant until it reaches the top of the radiator, and then install the radiator cap.
17. Start the engine, and then check the vehicle for coolant leakage. If coolant is leaking, have a Yamaha dealer check the cooling system.
18. Install the cowl and the panel.

Periodic maintenance and adjustment

EAU44736

Checking the engine idling speed


Check the engine idling speed and, if necessary, have it corrected by a Yamaha dealer.

Engine idling speed:
1250–1350 r/min

EAU21386

Checking the throttle grip free play

Measure the throttle grip free play as shown.

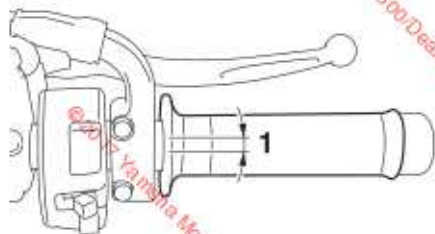

1. Throttle grip free play

Throttle grip free play:
3.0–5.0 mm (0.12–0.20 in)

Periodically check the throttle grip free play and, if necessary, have a Yamaha dealer adjust it.

Periodic maintenance and adjustment

EAU21402

EAU78721

Valve clearance

The valve clearance changes with use, resulting in improper air-fuel mixture and/or engine noise. To prevent this from occurring, the valve clearance must be adjusted by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA10504

WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the riding speed and with the total weight of rider, passenger, cargo, and accessories approved for this model.

Tire air pressure (measured on cold tires):

Front:
250 kPa (2.50 kgf/cm², 36 psi)

Rear:
290 kPa (2.90 kgf/cm², 42 psi)

Maximum load*:

185 kg (408 lb)

* Total weight of rider, passenger, cargo and accessories


Periodic maintenance and adjustment

EWA10512

⚠ WARNING

Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

Tire inspection

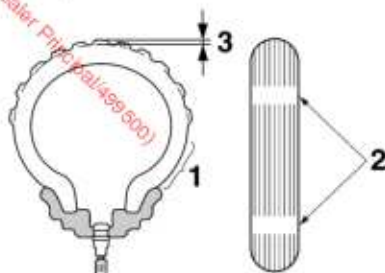

1. Tire sidewall
2. Tire wear indicator
3. Tire tread depth

The tires must be checked before each ride. If the tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, have a Yamaha dealer replace the tire immediately.

Minimum tire tread depth (front and rear):

1.0 mm (0.04 in)

EWA10583


⚠ WARNING

- It is dangerous to ride with a worn-out tire. When a tire tread begins to show crosswise lines, have a Yamaha dealer replace the tire immediately.
- The replacement of all wheel and brake-related parts, including the tires, should be left to a

Yamaha dealer, who has the necessary professional knowledge and experience to do so.

- Ride at moderate speeds after changing a tire since the tire surface must first be "broken in" for it to develop its optimal characteristics.

Tire information

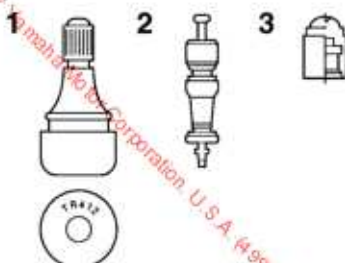

1. Tire air valve
2. Tire air valve core
3. Tire air valve cap with seal

This model is equipped with tubeless tires and rubber tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

EWA10482

⚠ WARNING

- The front and rear tires should be of the same make and design, otherwise the handling characteristics of the motorcycle may be different, which could lead to an accident.

Periodic maintenance and adjustment

- Always make sure that the valve caps are securely installed to prevent air pressure leakage.
- Use only the tire valves and valve cores listed below to avoid tire deflation during a high-speed ride.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:

Size:

120/70ZR17M/C (58W)

Manufacturer/model:

DUNLOP/SPORTMAX D214F

BRIDGESTONE/BATTLAX S21F

Rear tire:

Size:

180/55ZR17M/C(73W)

Manufacturer/model:

DUNLOP/SPORTMAX D214

BRIDGESTONE/BATTLAX S21R

FRONT and REAR:

Tire air valve:

TR412

Valve core:

#9100 (original)

speed riding to ride conservatively for approximately 100 km (60 mi) after installing a new tire.

- The tires must be warmed up before a high-speed run.
- Always adjust the tire air pressure according to the operating conditions.

WARNING

This motorcycle is fitted with super-high-speed tires. Note the following points in order to make the most efficient use of these tires.

- Use only the specified replacement tires. Other tires may run the danger of bursting at super high speeds.
- Brand-new tires can have a relatively poor grip on certain road surfaces until they have been "broken in". Therefore, it is advisable before doing any high-

Periodic maintenance and adjustment


Cast wheels

To maximize the performance, durability, and safe operation of your vehicle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends, warpage or other damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

Adjusting the clutch lever free play

Measure the clutch lever free play as shown.

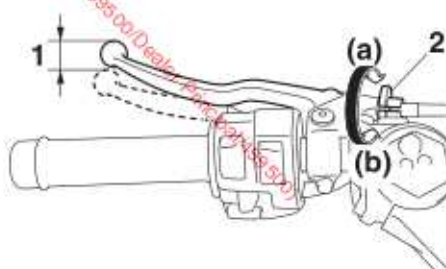

1. Clutch lever free play
2. Clutch lever free play adjusting bolt

Clutch lever free play:

10.0–15.0 mm (0.39–0.59 in)

Periodically check the clutch lever free play and, if necessary, adjust it as follows.

To increase the clutch lever free play, turn the clutch lever free play adjusting bolt at the clutch lever in direction (a). To decrease the clutch lever free play, turn the adjusting bolt in direction (b).


TIP

If the specified clutch lever free play cannot be obtained as described above, proceed as follows.

1. Fully turn the adjusting bolt at the clutch lever in direction (a) to loosen the clutch cable.
2. Remove panel B and cowling C. (See page 8-7.)
3. Loosen the locknut at the crankcase.

Periodic maintenance and adjustment


EAU37914

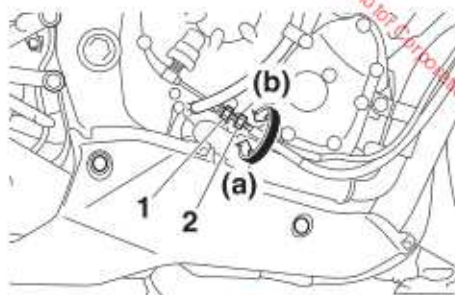

1. Locknut
2. Clutch lever free play adjusting nut

4. To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To decrease the clutch lever free play, turn the adjusting nut in direction (b).
5. Tighten the locknut.
6. Install the cowl and the panel.

Checking the brake lever free play

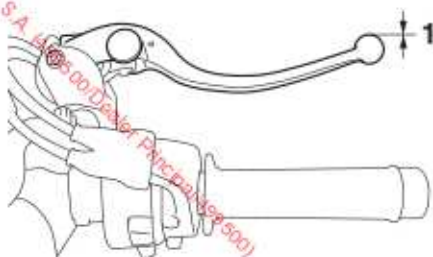

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14212

! WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the braking performance, which may result in loss of control and an accident.

Periodic maintenance and adjustment


Brake light switches

The brake light, which is activated by the brake pedal and brake lever, should come on just before braking takes effect. If necessary, have a Yamaha dealer adjust the brake light switches.

Checking the front and rear brake pads

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

Front brake pads

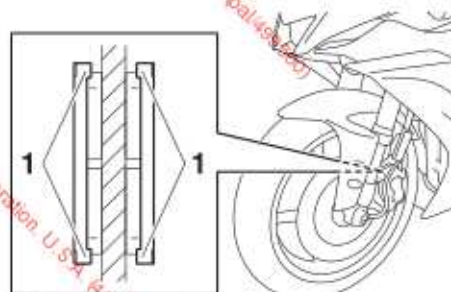


1. Brake pad wear indicator

Each front brake pad is provided with wear indicators, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the position of the wear indicators while applying the brake. If a brake pad has worn to the point that a wear indicator almost touches the brake disc, have a Yamaha dealer replace the brake pads as a set.

Periodic maintenance and adjustment

EALU46292

Rear brake pads

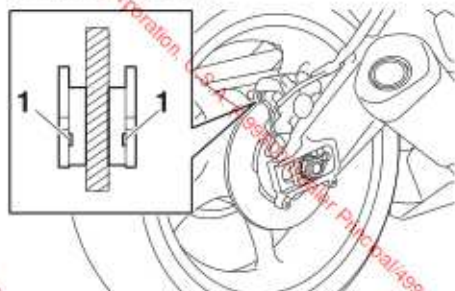


1. Brake pad wear indicator groove

Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that a wear indicator groove almost appears, have a Yamaha dealer replace the brake pads as a set.

Checking the brake fluid level


Before riding, check that the brake fluid is above the minimum level mark. Check the brake fluid level with the top of the reservoir level. Replenish the brake fluid if necessary.

Front brake

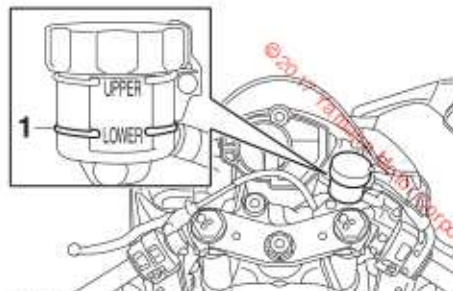

1. Minimum level mark

Rear brake

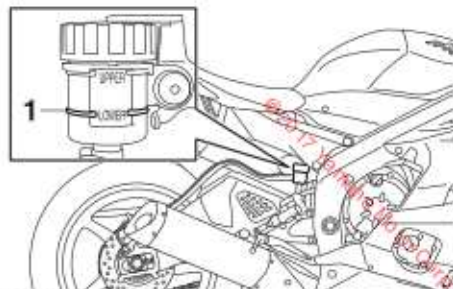

1. Minimum level mark

Specified brake fluid:
DOT 4

EWA16011

WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.

Periodic maintenance and adjustment

EAU22733

- Clean the filler cap before removing. Use only DOT 4 brake fluid from a sealed container.
- Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.
- Refill with the same type of brake fluid. Adding a brake fluid other than DOT 4 may result in a harmful chemical reaction.
- Be careful that water or dust does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock, and dirt may clog the ABS hydraulic unit valves.

ECA17641

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the brake system for leakage. If the brake fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

Changing the brake fluid

Have a Yamaha dealer change the brake fluid at the intervals specified in the periodic maintenance and lubrication chart. In addition, have the oil seals of the master cylinders and calipers as well as the brake hoses replaced at the intervals listed below or whenever they are damaged or leaking.

- Oil seals: Replace every two years.
- Brake hoses: Replace every four years.

Periodic maintenance and adjustment

EAU22762

EAU74260

Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.


To check the drive chain slack

1. Place the motorcycle on the side-stand.

TIP

When checking and adjusting the drive chain slack, there should be no weight on the motorcycle.

2. Shift the transmission into the neutral position.
3. Measure the drive chain slack as shown.

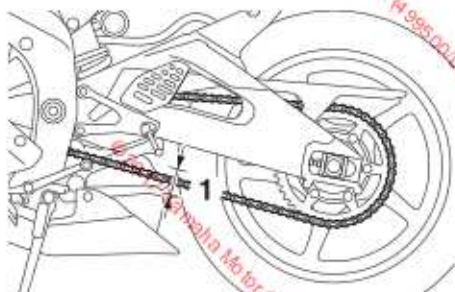

1. Drive chain slack

Drive chain slack:


30.0–45.0 mm (1.18–1.77 in)

4. If the drive chain slack is incorrect, adjust it as follows. **NOTICE:** Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits.

To adjust the drive chain slack


Consult a Yamaha dealer before adjusting the drive chain slack.

1. Loosen the axle nut and the lock-nut on each side of the swingarm.

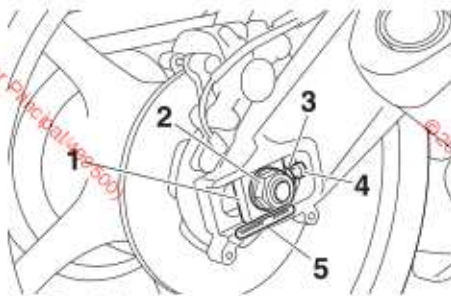

1. Drive chain puller
2. Axle nut
3. Drive chain slack adjusting bolt
4. Locknut
5. Alignment marks

2. To tighten the drive chain, turn the drive chain slack adjusting bolt on each side of the swingarm in direction (a). To loosen the drive chain, turn the adjusting bolt on each side of the swingarm in direction (b), and then push the rear wheel forward.

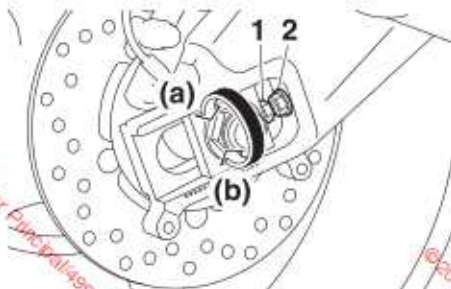

1. Drive chain slack adjusting bolt
2. Locknut

Periodic maintenance and adjustment

EAU23026

TIP

Using the alignment marks on each side of the swingarm, make sure that both drive chain pullers are in the same position for proper wheel alignment.

3. Tighten the axle nut, then the locknuts to their specified torques.

Tightening torques:

- Axle nut:
110 N·m (11 kgf·m, 80 lb·ft)
Locknut:
16 N·m (1.6 kgf·m, 12 lb·ft)

4. Make sure that the drive chain pullers are in the same position, the drive chain slack is correct, and the drive chain moves smoothly.

Cleaning and lubricating the drive chain

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10584

NOTICE

The drive chain must be lubricated after washing the motorcycle, riding in the rain or riding in wet areas.

1. Clean the drive chain with kerosene and a small soft brush.

NOTICE: To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents. [ECA11122]

2. Wipe the drive chain dry.
3. Thoroughly lubricate the drive chain with a special O-ring chain lubricant. **NOTICE:** Do not use engine oil or any other lubricants for the drive chain, as they may contain substances that could damage the O-rings.

[ECA11112]

Checking and lubricating the cables

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.** [EWA10712]

Recommended lubricant:

Yamaha cable lubricant or other suitable cable lubricant

Checking and lubricating the throttle grip and cable

The operation of the throttle grip should be checked before each ride. In addition, the cable should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart.

The throttle cable is equipped with a rubber cover. Make sure that the cover is securely installed. Even though the cover is installed correctly, it does not completely protect the cable from water entry. Therefore, use care not to pour water directly onto the cover or cable when washing the vehicle. If the cable or cover becomes dirty, wipe clean with a moist cloth.


Periodic maintenance and adjustment

EAU44276


Checking and lubricating the brake and shift pedals

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary.

Brake pedal

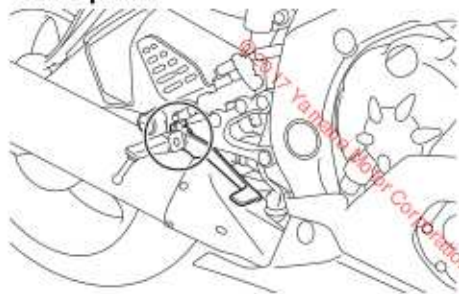

Shift pedal

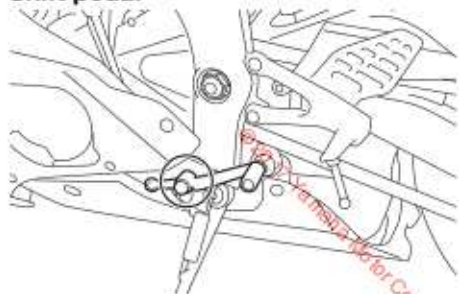


EAU23144


Checking and lubricating the brake and clutch levers

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.

Brake lever

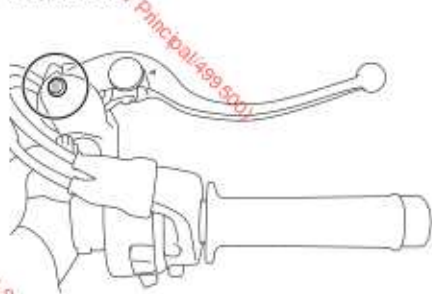

Clutch lever

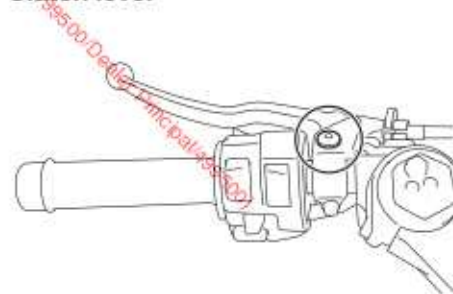


Recommended lubricant:
Lithium-soap-based grease

Recommended lubricants:

Brake lever:
Silicone grease
Clutch lever:
Lithium-soap-based grease

Checking and lubricating the sidestand

EAL023203

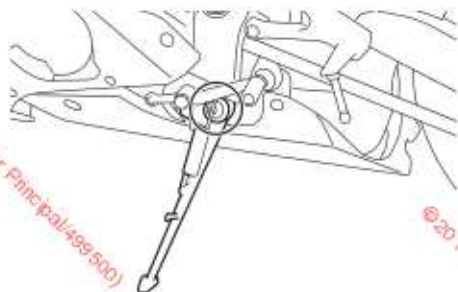

The operation of the sidestand should be checked before each ride, and the sidestand pivot and metal-to-metal contact surfaces should be lubricated if necessary.

EWA10732


WARNING

If the sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

Recommended lubricant:
Lithium-soap-based grease

Lubricating the swingarm pivots

EALM1663

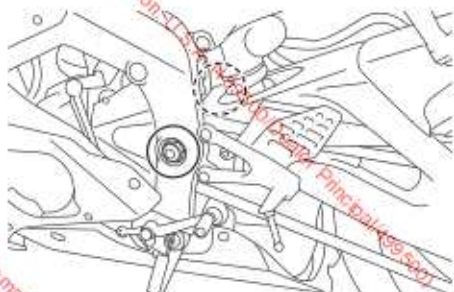

The swingarm pivots must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant:
Lithium-soap-based grease

Periodic maintenance and adjustment

Checking the front fork

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.



ECA10591


NOTICE

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.


Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Raise the front wheel off the ground. (See page 8-39.) **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

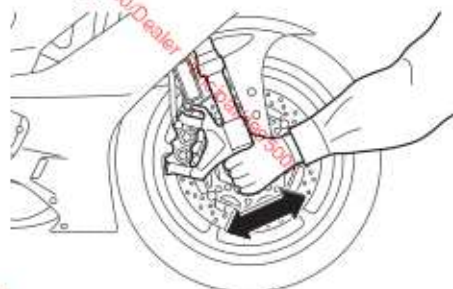


Checking the wheel bearings

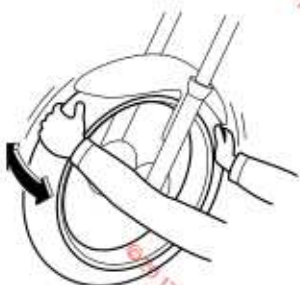

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

Battery

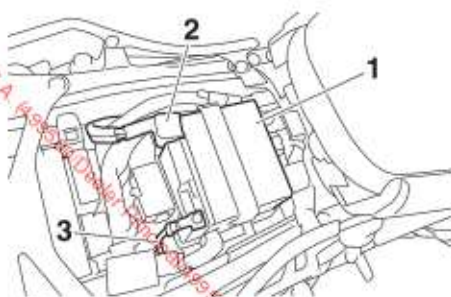

1. Battery
2. Positive battery lead (red)
3. Negative battery lead (black)

The battery is located under the rider seat. (See page 5-20.)

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10781



WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe burns. Avoid any contact with skin, eyes or clothing and always shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.**
 - **EXTERNAL:** Flush with plenty of water.
 - **INTERNAL:** Drink large quantities of water or milk and immediately call a physician.
 - **EYES:** Flush with water for 15 minutes and seek prompt medical attention.

Periodic maintenance and adjustment

- Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.
- **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a **VRLA (Valve Regulated Lead Acid)** battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place.
NOTICE: When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead. [ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.

3. Fully charge the battery before installation. **NOTICE:** When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.

[ECA16842]

4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16631

NOTICE

Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

Periodic maintenance and adjustment

EAU23709

Replacing the fuses


The main fuse, the ABS motor fuse, and fuse box 1 are located under the rider seat. (See page 5-20.)

TIP

To access the ABS motor fuse, remove the starter relay cover by pulling it upward.




1. ABS motor fuse
2. Starter relay cover
3. ABS motor spare fuse
4. Main fuse

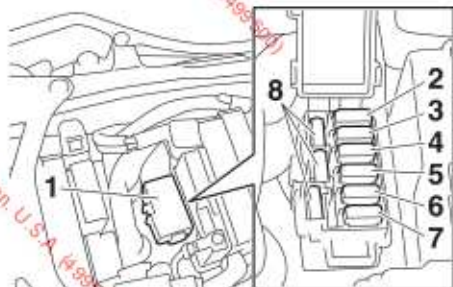

1. Fuse box 1
2. Fuel injection system fuse
3. ABS ECU fuse
4. Terminal fuse 1 (for optional equipment)
5. Electronic throttle valve fuse
6. Backup fuse (for clock)
7. ABS solenoid fuse
8. Spare fuse

Fuse box 2 is located under panel A. (See page 8-7.)

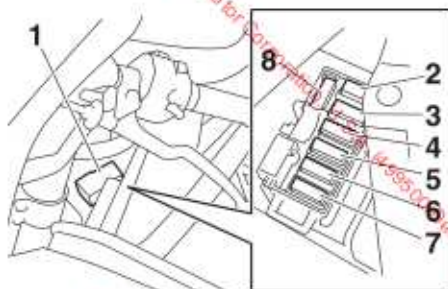

1. Fuse box 2
2. Turn signal light fuse
3. Headlight fuse
4. Ignition fuse
5. Signaling system fuse
6. Right radiator fan motor fuse
7. Left radiator fan motor fuse
8. Spare fuse

If a fuse is blown, replace it as follows.

1. Turn the key to "OFF" and turn off the electrical circuit in question.
2. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.** [EWA15132]

Periodic maintenance and adjustment

EAU90380

Specified fuses:

Main fuse:

50.0 A

Terminal fuse 1:

2.0 A

Fuel injection system fuse:

15.0 A

ABS motor fuse:

30.0 A

ABS ECU fuse:

7.5 A

ABS solenoid fuse:

10.0 A

Turn signal light fuse:

7.5 A

Electronic throttle valve fuse:

7.5 A

Backup fuse:

7.5 A

Radiator fan motor fuse:

15.0 A × 2

Ignition fuse:

15.0 A

Signaling system fuse:

10.0 A

Headlight fuse:

7.5 A

Vehicle lights

Except for the license plate light bulb, this model's lights are all LED. If an LED light does not come on, check the fuses and then have a Yamaha dealer check the vehicle. If the license plate light does not come on, check and replace the bulb. (See page 8-39.)

ECA16581

NOTICE

Do not affix any type of tinted film or stickers to the headlight lens.

8


3. Turn the key to "ON" and turn on the electrical circuit in question to check if the device operates.
4. If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

Periodic maintenance and adjustment

EAU24314

Replacing the license plate light bulb

1. Remove the license plate light unit by removing the screws.

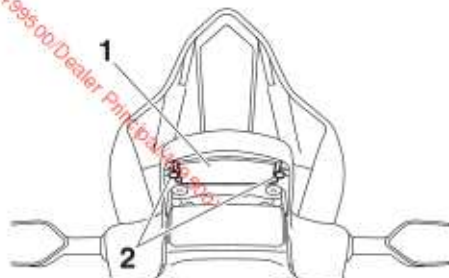

1. License plate light unit
2. Screw

2. Remove the license plate light bulb socket (together with the bulb) by pulling it out.




1. License plate light bulb socket
2. License plate light bulb

3. Remove the burnt-out bulb by pulling it out.
4. Insert a new bulb into the socket.
5. Install the socket (together with the bulb) by pushing it in.
6. Install the license plate light unit by installing the screws.

EAU67131

Supporting the motorcycle

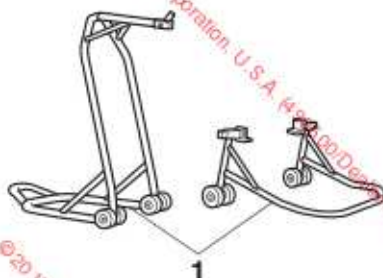

1. Maintenance stand (example)

Since this model is not equipped with a centerstand, use maintenance stands when removing the front or rear wheel or when performing other maintenance that requires the motorcycle to stand up right.

Check that the motorcycle is in a stable and level position before starting any maintenance.

Periodic maintenance and adjustment

EAU25872

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142

8




WARNING

When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.


Troubleshooting charts

Starting problems or poor engine performance


1. Fuel

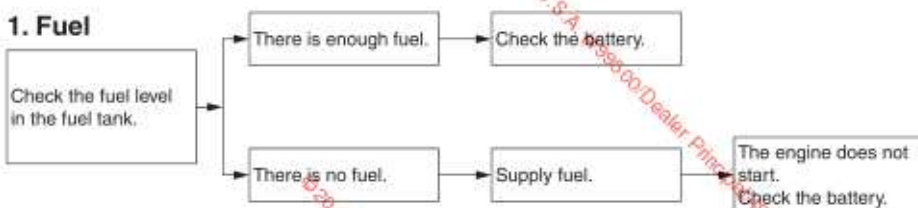


2. Battery

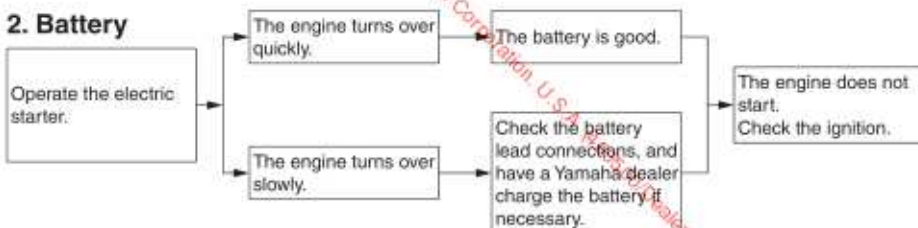

3. Ignition

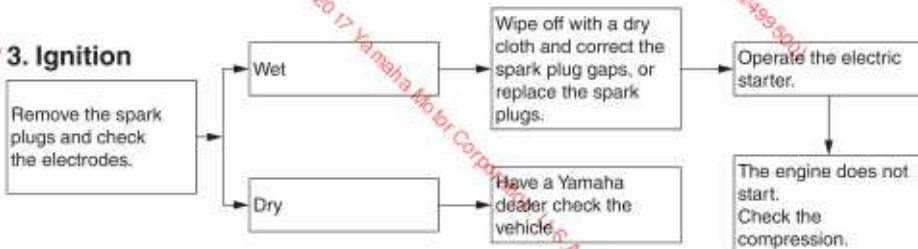

4. Compression

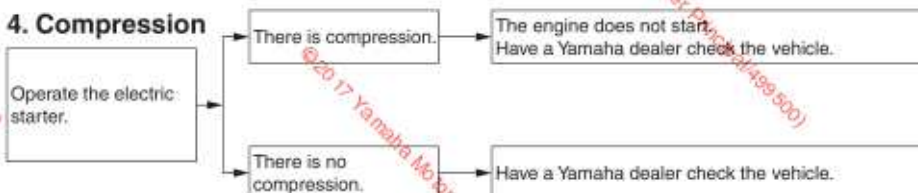

Periodic maintenance and adjustment


Engine overheating

EWAT1041



WARNING

- Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.
- Place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

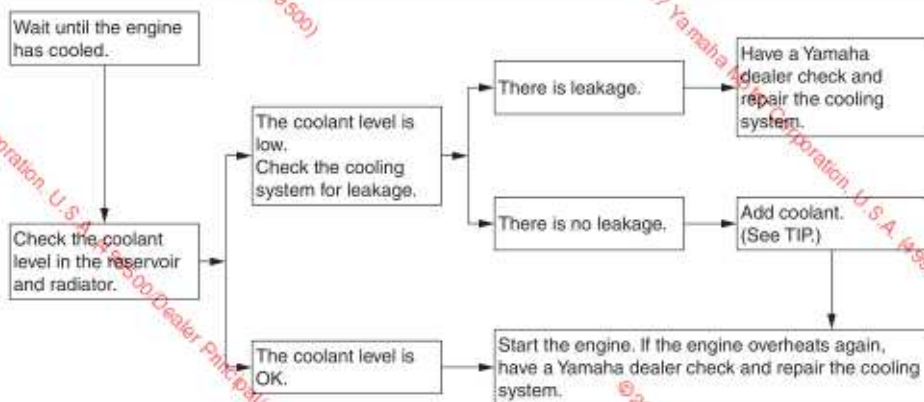

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

Matte color caution

EAU37834

EAU54721

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

Care

While the open design of a motorcycle reveals the attractiveness of the technology, it also makes it more vulnerable. Rust and corrosion can develop even if high-quality components are used. A rusty exhaust pipe may go unnoticed on a car, however, it detracts from the overall appearance of a motorcycle. Frequent and proper care does not only comply with the terms of the warranty, but it will also keep your motorcycle looking good, extend its life and optimize its performance.

Before cleaning

1. Cover the muffler outlet with a plastic bag after the engine has cooled down.
2. Make sure that all caps and covers as well as all electrical couplers and connectors, including the spark plug caps, are tightly installed.
3. Remove extremely stubborn dirt, like oil burnt onto the crankcase, with a degreasing agent and a brush, but never apply such products onto seals, gaskets, sprockets, the drive chain and wheel axles. Always rinse the dirt and degreaser off with water.

Cleaning

ECA11143

NOTICE

- Avoid using strong acidic wheel cleaners, especially on spoked wheels. If such products are used on hard-to-remove dirt, do not leave the cleaner on the af-

fectured area any longer than instructed. Also, thoroughly rinse the area off with water, immediately dry it, and then apply a corrosion protection spray.

- Improper cleaning can damage plastic parts (such as cowlings, panels, windshields, headlight lenses, meter lenses, etc.) and the mufflers. Use only a soft, clean cloth or sponge with water to clean plastic. However, if the plastic parts cannot be thoroughly cleaned with water, diluted mild detergent with water may be used. Be sure to rinse off any detergent residue using plenty of water, as it is harmful to plastic parts.
- Do not use any harsh chemical products on plastic parts or the muffler. Be sure to avoid using cloths or sponges which have been in contact with strong or abrasive cleaning products, solvent or thinner, fuel (gasoline), rust removers or inhibitors, brake fluid, antifreeze or electrolyte.
- Do not use high-pressure washers or steam-jet cleaners since they cause water seepage and deterioration in the following areas: seals (of wheel and swing-arm bearings, fork and brakes), storage compartments, electric components (couplers, connectors, instruments, switches and lights), breather hoses and vents.

- For motorcycles equipped with a windshield: Do not use strong cleaners or hard sponges as they will cause dulling or scratching. Some cleaning compounds for plastic may leave scratches on the windshield. Test the product on a small hidden part of the windshield to make sure that it does not leave any marks. If the windshield is scratched, use a quality plastic polishing compound after washing.

After normal use

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas. Stubborn dirt and insects will come off more easily if the area is covered with a wet cloth for a few minutes before cleaning.

After riding in the rain, near the sea or on salt-sprayed roads

Since sea salt or salt sprayed on roads during winter are extremely corrosive in combination with water, carry out the following steps after each ride in the rain, near the sea or on salt-sprayed roads.

TIP

Salt sprayed on roads in the winter may remain well into spring.

1. Clean the motorcycle with cold water and a mild detergent, after the engine has cooled down.

Motorcycle care and storage

NOTICE: Do not use warm water since it increases the corrosive action of the salt. [ECA10792]

2. After drying the motorcycle, apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces (except the titanium muffler) to prevent corrosion.

Cleaning the windshield

Avoid using any alkaline or strong acid cleaner, gasoline, brake fluid, or any other solvent. Clean the windshield with a cloth or sponge dampened with a neutral detergent, and after cleaning, thoroughly wash it off with water. For additional cleaning, use Yamaha Windshield Cleaner or other quality cleaner. Some cleaning compounds for plastics may leave scratches on surfaces of the windshield. Before using them, make a test by polishing an area which does not affect your visibility.

Cleaning the titanium muffler

This model is equipped with a titanium muffler, which requires the following special care.

- Use only a soft, clean cloth or sponge with mild detergent and water to clean the titanium muffler. However, if the muffler cannot be thoroughly cleaned with mild detergent, alkaline products and a soft brush may be used.
- Never use compounds or other special treatments to clean the titanium muffler, as they will remove the finish on the outer surface of the muffler.

- Even the smallest amounts of oil, such as from oily towels or fingerprints, will leave stains on the titanium muffler, which can be removed with a mild detergent.
- Note that the thermally induced discoloring of the portion of the exhaust pipe leading into the titanium muffler is normal and cannot be removed.

After cleaning

1. Dry the motorcycle with a chamois or an absorbing cloth.
2. Immediately dry the drive chain and lubricate it to prevent it from rusting.
3. Use a chrome polish to shine chrome, aluminum and stainless-steel parts.
4. To prevent corrosion, it is recommended to apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces.
5. Use spray oil as a universal cleaner to remove any remaining dirt.
6. Touch up minor paint damage caused by stones, etc.
7. Wax all painted surfaces.
8. Let the motorcycle dry completely before storing or covering it.

WARNING

Contaminants on the brakes or tires can cause loss of control.

- **Make sure that there is no oil or wax on the brakes or tires.**
- **If necessary, clean the brake discs and brake linings with a regular brake disc cleaner or acetone, and wash the tires with**

EWA11132

Motorcycle care and storage

warm water and a mild detergent. Before riding at higher speeds, test the motorcycle's braking performance and cornering behavior.

ECA10801

NOTICE

- Apply spray oil and wax sparingly and make sure to wipe off any excess.
- Never apply oil or wax to any rubber and plastic parts, but treat them with a suitable care product.
- Avoid using abrasive polishing compounds as they will wear away the paint.

TIP

- Consult a Yamaha dealer for advice on what products to use.
- Washing, rainy weather or humid climates can cause the headlight lens to fog. Turning the headlight on for a short period of time will help remove the moisture from the lens.

Storage

EAU25183

Short-term

Always store your motorcycle in a cool, dry place and, if necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the motorcycle.

ECA10811

NOTICE

- Storing the motorcycle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.
- To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.

Long-term

Before storing your motorcycle for several months:

1. Follow all the instructions in the "Care" section of this chapter.
2. Fill up the fuel tank and add fuel stabilizer (if available) to prevent the fuel tank from rusting and the fuel from deteriorating.
3. Perform the following steps to protect the cylinders, piston rings, etc. from corrosion.
 - a. Remove the spark plug caps and spark plugs.
 - b. Pour a teaspoonful of engine oil into each spark plug bore.
 - c. Install the spark plug caps onto the spark plugs, and then place the spark plugs on the cylin-

der head so that the electrodes are grounded. (This will limit sparking during the next step.)

- d. Turn the engine over several times with the starter. (This will coat the cylinder walls with oil.)

WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.

[EWA10952]

- e. Remove the spark plug caps from the spark plugs, and then install the spark plugs and the spark plug caps.
4. Lubricate all control cables and the pivoting points of all levers and pedals as well as of the side-stand/centerstand.
5. Check and, if necessary, correct the tire air pressure, and then lift the motorcycle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
6. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
7. Remove the battery and fully charge it. Store it in a cool, dry place and charge it once a month. Do not store the battery in an excessively cold or warm place [less than 0 °C (30 °F) or more than 30 °C (90 °F)]. For more information on storing the battery, see page 8-35.

TIP

Make any necessary repairs before storing the motorcycle.

Specifications

Dimensions:

- Overall length:
2040 mm (80.3 in)
- Overall width:
695 mm (27.4 in)
- Overall height:
1150 mm (45.3 in)
- Seat height:
850 mm (33.5 in)
- Wheelbase:
1375 mm (54.1 in)
- Ground clearance:
130 mm (5.12 in)
- Minimum turning radius:
3.6 m (11.81 ft)

Weight:


- Curb weight:
190 kg (419 lb)

Engine:

- Combustion cycle:
4-stroke
- Cooling system:
Liquid cooled
- Valve train:
DOHC
- Cylinder arrangement:
Inline
- Number of cylinders:
4-cylinder
- Displacement:
599 cm³
- Bore × stroke:
67.0 × 42.5 mm (2.64 × 1.67 in)
- Compression ratio:
13.1 : 1
- Starting system:
Electric starter
- Lubrication system:
Wet sump

Engine oil:

- Recommended brand:
YAMALUBE
- SAE viscosity grades:
10W-40, 10W-50, 15W-40, 20W-40 or
20W-50

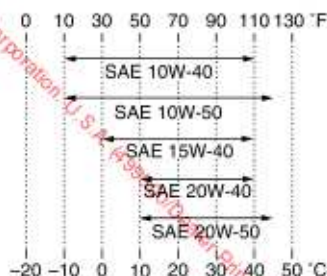

Recommended engine oil grade:
API service SG type or higher, JASO
standard MA

Engine oil quantity:

- Oil change:
2.40 L (2.54 US qt, 2.11 Imp.qt)
- With oil filter removal:
2.60 L (2.75 US qt, 2.29 Imp.qt)

Coolant quantity:

- Coolant reservoir (up to the maximum level
mark):
0.25 L (0.26 US qt, 0.22 Imp.qt)
- Radiator (including all routes):
2.30 L (2.43 US qt, 2.02 Imp.qt)

Air filter:

- Air filter element:
Oil-coated paper element

Fuel:

- Recommended fuel:
Premium unleaded gasoline (Gasohol [E10]
acceptable)
- Fuel tank capacity:
17 L (4.5 US gal, 3.7 Imp.gal)
- Fuel reserve amount:
3.4 L (0.90 US gal, 0.75 Imp.gal)

Fuel injection:

- Throttle body:
ID mark:
BN61 00 (YZFR6H)
BN62 10 (YZFR6HC)

Spark plug(s):

- Manufacturer/model:
NGK/CR10EK
- Spark plug gap:
0.6–0.7 mm (0.024–0.028 in)

Clutch:

- Clutch type:
Wet, multiple-disc

Drivetrain:

- Primary reduction ratio:
2.073 (85/41)
- Final drive:
Chain
- Secondary reduction ratio:
2.813 (45/16)
- Transmission type:
Constant mesh 6-speed
- Gear ratio:
1st:
2.583 (31/12)
2nd:
2.000 (32/16)
3rd:
1.667 (30/18)
4th:
1.444 (26/18)
5th:
1.286 (27/21)
6th:
1.150 (23/20)

Chassis:

- Frame type:
Diamond
- Caster angle:
24.0°
- Trail:
97 mm (3.8 in)

Front tire:

- Type:
Tubeless
- Size:
120/70ZR17M/C (58W)
- Manufacturer/model:
DUNLOP/SPORTMAX D214F
- Manufacturer/model:
BRIDGESTONE/BATTLAX S21F

Rear tire:

- Type:
Tubeless
- Size:
180/55ZR17M/C(73W)
- Manufacturer/model:
DUNLOP/SPORTMAX D214
- Manufacturer/model:
BRIDGESTONE/BATTLAX S21R

Loading:

- Maximum load:
185 kg (408 lb)

(Total weight of rider, passenger, cargo and accessories)

Tire air pressure (measured on cold tires):

- Front:
250 kPa (2.50 kgf/cm², 36 psi)
- Rear:
290 kPa (2.90 kgf/cm², 42 psi)

Front wheel:

- Wheel type:
Cast wheel
- Rim size:
17M/C x MT3.50

Rear wheel:

- Wheel type:
Cast wheel
- Rim size:
17M/C x MT5.50

Front brake:

- Type:
Hydraulic dual disc brake
- Specified brake fluid:
DOT 4

Rear brake:

- Type:
Hydraulic single disc brake
- Specified brake fluid:
DOT 4

Front suspension:

- Type:
Telescopic fork
- Spring:
Coil spring
- Shock absorber:
Hydraulic damper
- Wheel travel:
120 mm (4.7 in)

Rear suspension:

- Type:
Swingarm (link suspension)
- Spring:
Coil spring
- Shock absorber:
Gas-hydraulic damper
- Wheel travel:
120 mm (4.7 in)

Electrical system:

- System voltage:
12 V

Specifications

Ignition system:

TCI

Charging system:

AC magneto

Battery:

Model:

YTZ7S

Voltage, capacity:

12 V, 6.0 Ah (10 HR)

Bulb wattage:

Headlight:

LED

Brake/tail light:

LED

Front turn signal/position light:

LED

Rear turn signal light:

LED

Auxiliary light:

LED

License plate light:

5.0 W

Meter lighting:

LED

Neutral indicator light:

LED

High beam indicator light:

LED

Oil level warning light:

LED

Turn signal indicator light:

LED

Fuel level warning light:

LED

Coolant temperature warning light:

LED

Engine trouble warning light:

LED

ABS warning light:

LED

Shift timing indicator light:

LED

Traction control system indicator/warning

light:

LED

Fuse(s):

Main fuse:

50.0 A

Terminal fuse 1:

2.0 A

Headlight fuse:

7.5 A

Signaling system fuse:

10.0 A

Ignition fuse:

15.0 A

Radiator fan motor fuse:

15.0 A × 2

Turn signal light fuse:

7.5 A

ABS ECU fuse:

7.5 A

Fuel injection system fuse:

15.0 A

ABS motor fuse:

30.0 A

ABS solenoid fuse:

10.0 A

Backup fuse:

7.5 A

Electronic throttle valve fuse:

7.5 A

EAU26357

EAU26401

Identification numbers

Record the vehicle identification number, engine serial number, model label information, and the key identification number in the spaces provided below. These identification numbers are needed when registering the vehicle with the authorities in your area and when ordering spare parts from a Yamaha dealer.


VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:

MODEL LABEL INFORMATION:

KEY IDENTIFICATION NUMBER:

Vehicle identification number

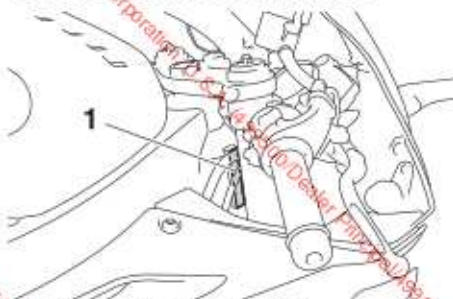

1. Vehicle identification number


The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

TIP

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

EAU26442

Engine serial number

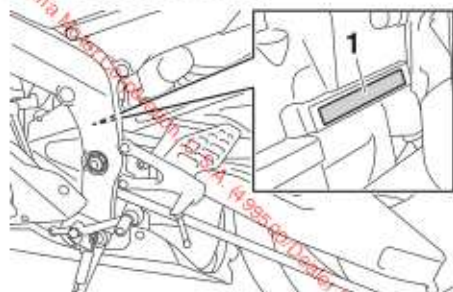


1. Engine serial number

The engine serial number is stamped into the crankcase.

Consumer information

Model label

EAU26521

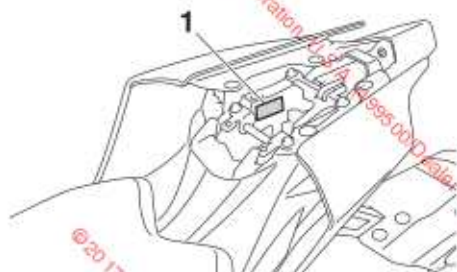

1. Model label

The model label is affixed to the frame under the passenger seat. (See page 5-20.) Record the information on this label in the space provided. This information will be needed when ordering spare parts from a Yamaha dealer.

Key identification number

EAU26382




1. Key identification number

The key identification number is stamped into the key tag. Record this number in the space provided and use it for reference when ordering a new key.

Vehicle Emission Control Information label


EAU48271

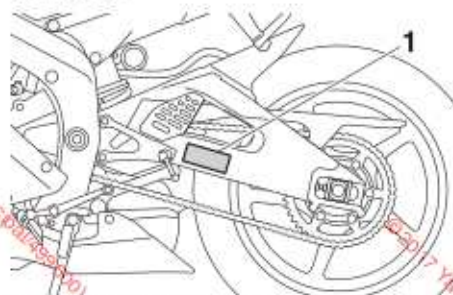

1. Vehicle Emission Control Information label

The Vehicle Emission Control Information label is affixed at the location in the illustration. This label shows specifications related to exhaust emissions as required by federal law, state law and Environment Canada.

Diagnostic connector

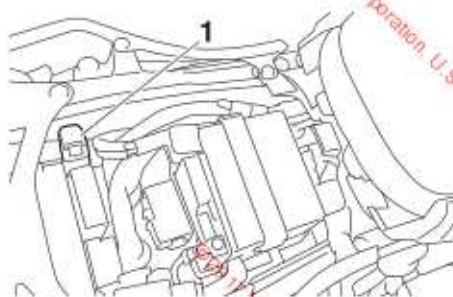

1. Diagnostic connector

The diagnostic connector is located as shown.

Vehicle data recording

This model's ECU stores certain vehicle data to assist in the diagnosis of malfunctions and for research and development purposes. This data will be uploaded only when a special Yamaha diagnostic tool is attached to the vehicle, such as when maintenance checks or service procedures are performed.

Although the sensors and recorded data will vary by model, the main data points are:

- Vehicle status and engine performance data
- Fuel-injection and emission-related data

Yamaha will not disclose this data to a third party except:

- With the consent of the vehicle owner
- Where obligated by law
- For use by Yamaha in litigation
- For general Yamaha-conducted research purposes when the data is not related to an individual vehicle nor owner

Consumer information

EAU20053

Reporting safety defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Yamaha Motor Corporation, U.S.A. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Yamaha Motor Corporation, U.S.A.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE, West Building, Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Motorcycle noise regulation

TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

"AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW".

These acts include tampering with the following systems; i.e., modification, removal, etc.

Exhaust system

- Muffler
- Exhaust pipe
- Silencer

Intake system

- Air cleaner case
- Air cleaner element
- Intake duct

Consumer information

EAU53481

Maintenance record

Copies of work orders and/or receipts for parts purchased and installed on your vehicle will be required to document that maintenance has been completed in accordance with the emissions warranty. The chart below is printed only as a reminder that maintenance work is required. It is not acceptable proof of maintenance work.

Maintenance interval	Date of service	Mileage	Servicing dealer name and address	Remarks
600 mi (1000 km) or 1 month				
4000 mi (7000 km) or 6 months				
8000 mi (13000 km) or 12 months				
12000 mi (19000 km) or 18 months				
16000 mi (25000 km) or 24 months				
20000 mi (31000 km) or 30 months				
24000 mi (37000 km) or 36 months				
28000 mi (43000 km) or 42 months				
32000 mi (49000 km) or 48 months				
36000 mi (55000 km) or 54 months				
40000 mi (61000 km) or 60 months				

YAMAHA MOTOR CORPORATION, U.S.A. 2015 AND LATER MODEL STREET & DUAL-PURPOSE MOTORCYCLE LIMITED WARRANTY

Yamaha Motor Corporation, U.S.A. hereby warrants that each new Yamaha motorcycle purchased from an authorized Yamaha motorcycle dealer in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations.

THE PERIOD OF WARRANTY for Yamaha motorcycles originally equipped with headlight, stoplight, and turn signals shall be one (1) year from the date of purchase, with no mileage limitation, except for the battery, which is warranted for thirty (30) days from the date of purchase.

MODELS EXCLUDED FROM WARRANTY include those used for non-Yamaha-authorized renting, leasing, or other commercial purposes.

DURING THE PERIOD OF WARRANTY any authorized Yamaha motorcycle dealer will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become the property of Yamaha Motor Corporation, U.S.A.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- Competition or racing use.
- Installation of parts or accessories that are not qualitatively equivalent to genuine Yamaha parts.
- Abnormal strain, neglect, or abuse.
- Lack of proper maintenance and off-season storage as described in the Owner's Manual.
- Accident or collision damage.
- Modification to original parts.
- Damage due to improper transportation.

SPECIFIC EXCLUSIONS from this warranty shall include parts replaced due to normal wear or routine maintenance.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

- Operate and maintain the motorcycle as specified in the appropriate Owner's Manual, and
- Give notice to an authorized Yamaha motorcycle dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at that time for inspection and repairs at such dealer's place of business.

WARRANTY TRANSFER: To transfer the warranty from the original purchaser to any subsequent purchaser, it is imperative that the machine be inspected and registered for warranty by an authorized Yamaha motorcycle dealer. In order for this warranty to remain in effect, this inspection and registration must take place within ten (10) days after transfer. A reasonable dealer-imposed fee may be charged for the inspection.

EMISSIONS CONTROL SYSTEM WARRANTY

Yamaha Motor Corporation, U.S.A. also warrants to the ultimate purchaser and each subsequent purchaser of each Yamaha motorcycle covered by this warranty with a displacement of 50cc or greater, that the vehicle is designed, built, and equipped so as to conform at the time of sale with all U.S. emissions standards applicable at the time of manufacture and that it is free from defects in materials and workmanship which would cause it not to meet these standards within the periods listed immediately below. Failures other than those resulting from defects in material or workmanship which arise solely as a result of owner abuse and/or lack of proper maintenance are not covered by this warranty.

ENGINE DISPLACEMENT

50cc to 169cc
170cc to 279cc
280cc or over

PERIOD

12,000 km (7,465 miles) or five years, whichever occurs first
18,000 km (11,185 miles) or five years, whichever occurs first
30,000 km (18,641 miles) or five years, whichever occurs first

YAMAHA MOTOR CORPORATION, U.S.A. MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY YAMAHA MOTOR CORPORATION, U.S.A. AND EXCLUDED FROM THIS WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. ALSO EXCLUDED FROM THIS WARRANTY ARE ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

YAMAHA MOTOR CORPORATION, U.S.A.
P.O. Box 6555
Cypress, California 90630

Consumer information

WARRANTY QUESTIONS AND ANSWERS

- Q. What costs are my responsibility during the warranty period?
- A. The customer's responsibility includes all costs of normal maintenance services, non-warranty repairs, accident and collision damages, and oil, oil filters, air filters, spark plugs, and brake shoes.
- Q. What are some examples of "abnormal" strain, neglect, or abuse?
- A. These terms are general and overlap each other in areas. Specific examples include: Running the machine out of oil, sustained high rpm, full-throttle, operating the machine with a broken or damaged part which causes another part to fail, damage or failure due to improper or careless transportation and/or tie-down. If you have any specific questions on operation or maintenance, please contact your dealer for advice.
- Q. Does the warranty cover incidental costs such as towing or transportation due to a failure?
- A. No. The warranty is limited to repair of the machine itself.
- Q. May I perform any or all of the recommended maintenance shown in the Owner's Manual instead of having the dealer do them?
- A. Yes, if you are a qualified mechanic and follow the procedures specified in the Owner's and Service Manual. We do recommend, however, that items requiring special tools or equipment be done by a Yamaha motorcycle dealer.
- Q. Will the warranty be void or cancelled if I do not operate or maintain my new motorcycle exactly as specified in the Owner's Manual?
- A. No. The warranty on a new motorcycle cannot be "voided" or "cancelled." However, if a particular failure is caused by operation or maintenance other than as described in the Owner's Manual, that failure may not be covered under warranty.
- Q. What responsibility does my dealer have under this warranty?
- A. Each Yamaha motorcycle dealer is expected to:
1. Completely set up every new machine before sale.
 2. Explain the operation, maintenance, and warranty requirements to your satisfaction at the time of sale, and upon your request at any later date.
 3. Each Yamaha motorcycle dealer is held responsible for his setup, service and warranty repair work.
- Q. Is the warranty transferable to second owners?
- A. Yes. The remainder of the existing warranty can be transferred upon request. The unit has to be inspected and re-registered by an authorized Yamaha motorcycle dealer for the policy to remain effective.

CUSTOMER SERVICE

If your machine requires warranty service, you must take it to any authorized Yamaha motorcycle dealer within the continental United States. Be sure to bring your warranty registration card or other valid proof of the original date of purchase. If a question or problem arises regarding the warranty, first contact the owner of the dealership. Since all warranty matters are handled at the dealer level, this person is in the best position to help you. If you are still not satisfied and require additional assistance, please write to:

YAMAHA MOTOR CORPORATION, U.S.A.
CUSTOMER RELATIONS DEPARTMENT
P.O. Box 6555
Cypress, California 90630

When contacting Yamaha Motor Corporation, U.S.A., don't forget to include any important information such as names, addresses, model, V.I.N. (frame number), dates, and receipts.

CHANGE OF ADDRESS

The federal government requires each manufacturer of a motor vehicle to maintain a complete, up-to-date list of all first purchasers against the possibility of a safety-related defect and recall. This list is compiled from the purchase registrations sent to Yamaha Motor Corporation, U.S.A. by the selling dealer at the time of your purchase.

If you should move after you have purchased your new motorcycle, please advise us of your new address by sending a postcard listing your motorcycle model name, V.I.N. (frame number), dealer number (or dealer's name) as it is shown on your warranty card, your name and new mailing address. Mail to:

YAMAHA MOTOR CORPORATION, U.S.A.
P.O. Box 6555
Cypress, California 90630
Attention: Warranty Department

This will ensure that Yamaha Motor Corporation, U.S.A., has an up-to-date registration record in accordance with federal law.

YAMAHA EXTENDED SERVICE (Y.E.S.)

Keep your Yamaha protected even after your warranty expires with genuine Yamaha Extended Service (Y.E.S.).

- Y.E.S. is designed and administered by Yamaha Motor Corporation to provide maximum owner satisfaction. You get uninterrupted factory-backed coverage for extra peace of mind.
- Y.E.S. is flexible. You choose the plan that's right for you: 12 months, 24 months, 36 months or, on certain models, even 48 months beyond your warranty period.
- Y.E.S. is designed and administered by the same Yamaha people who handle your warranty – and it shows in the comprehensive coverage benefits. There are no mileage limitations. Coverage isn't limited to "moving parts" or the "drive train" like many other plans. And Y.E.S. covers manufacturing defects just like the warranty. See the sample contract at your Yamaha dealer to see how comforting uninterrupted factory-backed protection can be.
- You don't have to pay anything for covered repairs. There's no deductible to pay, and repairs aren't "pro-rated." You don't have any "out-of-pocket" expenses for covered repairs.
- In addition, Travel and Recreation Interruption Protection (TRIP) is included at no extra cost. TRIP gives you up to \$250 reimbursement per occurrence for any reasonable expenses you incur because your Yamaha needs covered service: replacement vehicle rental, emergency towing, phone calls, even food and lodging when you are away from home. This superb coverage goes into effect when you purchase Y.E.S., so it applies to any warranty repairs as well as covered repairs during your entire Y.E.S. plan period.
- Y.E.S. coverage is honored at any authorized Yamaha dealer nationwide.
- Y.E.S. coverage is transferable to a new owner if you sell or trade-in. That can make your Yamaha much more valuable!

This excellent Y.E.S. plan coverage is only available to Yamaha owners like you, and only while your Yamaha is still within the Yamaha Limited Warranty period. So visit your authorized Yamaha dealer to get all the facts. He can show you how easy it is to protect your investment with Yamaha Extended Service.

Consumer information

We urge you to act now. You'll get the excellent benefits of TRIP coverage right away, and you'll rest easy knowing you'll have strong factory-backed protection even after your Yamaha Limited Warranty expires.

A special note:

If visiting your dealer isn't convenient, contact Yamaha with your Primary ID number (your frame number). We'll be happy to help you get the Y.E.S. coverage you need.

Yamaha Service Marketing

P.O. Box 6555

Cypress, CA 90630

1-866-YES-EXTD (1-866-937-3983)



YAMAHA EXTENDED SERVICE

A	Fuel tank breather/overflow hoses	5-19
ABS	Fuel tank cap	5-17
ABS warning light	Fuses, replacing	8-37
Air filter element	H	
Auxiliary DC connector	Handlebar switches	5-2
B	High beam indicator light	5-4
Battery	Horn switch	5-3
Brake and clutch levers, checking and lubricating	I	
Brake and shift pedals, checking and lubricating	Identification numbers	11-1
Brake fluid, changing	Ignition circuit cut-off system	5-28
Brake fluid level, checking	Indicator lights and warning lights	5-4
Brake lever	K	
Brake lever free play, checking	Key identification number	11-2
Brake light switches	L	
Brake pedal	Labels, location	1-1
C	License plate light bulb, replacing	8-39
Cables, checking and lubricating	M	
Canister (for California)	Main switch/steering lock	5-1
Care	Maintenance and lubrication, periodic	8-4
Catalytic converters	Maintenance, emission control system	8-3
Clutch lever	Maintenance record	11-6
Clutch lever free play, adjusting	Matte color, caution	9-1
Coolant	Model label	11-2
Coolant temperature warning light	Multi-function meter unit	5-6
Cowlings and panels, removing and installing	N	
D	Neutral indicator light	5-4
Data recording, vehicle	Noise regulation	11-5
Diagnostic connector	O	
Dimmer switch	Oil level warning light	5-4
D-mode (drive mode)	P	
Drive chain, cleaning and lubricating	Parking	7-5
Drive chain slack	Part locations	3-1
Drive mode switch	Pass switch	5-2
E	Q	
Engine break-in	Quick shift system	4-4
Engine idling speed, checking	R	
Engine oil and oil filter cartridge	Rear view mirrors	5-22
Engine serial number	S	
Engine stop switch	Safety defects, reporting	11-4
Engine trouble warning light	Safety information	2-1
EXUP system	Seats	5-20
F	Shifting	7-3
Front and rear brake pads, checking	Shift light	5-6
Front fork, adjusting	Shift pedal	5-15
Front fork, checking	Shock absorber assembly, adjusting	5-24
Fuel	Sidestand	5-28
Fuel level warning light	Sidestand, checking and lubricating	8-33
	Spark plugs, checking	8-11
	Special features	4-1

Index

Specifications	10-1
Starting the engine	7-2
Start switch	5-3
Steering, checking	8-34
Storage	9-4
Supporting the motorcycle	8-39
Swingarm pivots, lubricating	8-33

T

Throttle grip and cable, checking and lubricating	8-31
Throttle grip free play, checking	8-20
Tires	8-21
Tool kit	8-2
Traction control system	4-2
Traction control system indicator light	5-6
Traction control system switch	5-3
Troubleshooting	8-40
Troubleshooting charts	8-41
Turn signal indicator light	5-4
Turn signal switch	5-3

V

Valve clearance	8-21
Vehicle Emission Control Information label	11-2
Vehicle identification number	11-1
Vehicle lights	8-38

W

Warranty, extended	11-9
Warranty, limited	11-7
Wheel bearings, checking	8-35
Wheels	8-24

For your best ownership experience, think **Genuine Yamaha!**

Genuine Yamaha Parts – Genuine Yamaha replacement parts are the exact same parts as the ones originally equipped on your vehicle, providing you with the performance and durability you have come to expect. Why settle for aftermarket parts that may not provide full confidence and satisfaction?

Genuine Yamaha Accessories – Yamaha only offers accessories that meet our high standards for quality and performance. Buy with confidence, knowing your Genuine Yamaha Accessories will fit right and perform right – right out of the box.

Yamalube – Take care of your Yamaha with legendary Yamalube oils, lubricants, and care products. They're formulated and approved by the toughest judges we know: the Yamaha engineering teams that know your Yamaha from the inside out.

Genuine Yamaha Service Manuals – Get the same factory manual for your vehicle that the technicians at your authorized Yamaha dealer use. Service manuals are available through your Yamaha dealer or you can order them directly through yamahapubs.com (for US consumers only).

Genuine Yamaha products are available only from your Yamaha dealer.

Find out more at:

For US consumers, please visit yamaha-motor.com

For Canadian consumers, please visit yamaha-motor.ca

©2017 Yamaha Motor Corporation, U.S.A. (499500/Dealer Principal/499500)

©2017 Yamaha Motor Corporation, U.S.A. (499500/Dealer Principal/499500)

©2017 Yamaha Motor Corporation, U.S.A. (499500/Dealer Principal/499500)

©2017 Yamaha Motor Corporation, U.S.A. (499500/Dealer Principal/499500)



YAMAHA

PRINTED ON RECYCLED PAPER

PRINTED IN JAPAN
2017.01-2.5×1 CR
(E)